




Vacuum Relief Valve Setting Instructions

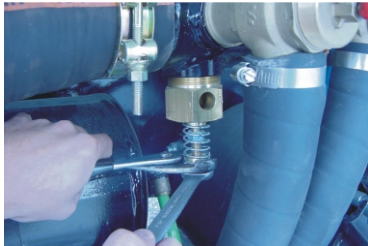

①

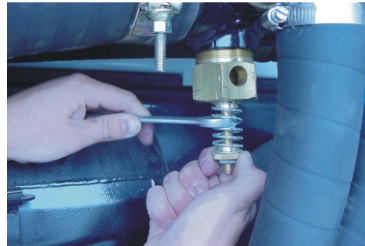

②

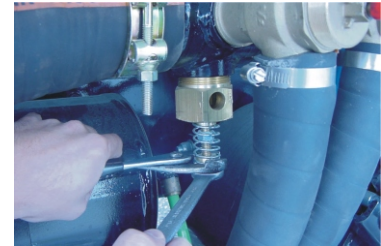

③

Picture 1

While securing the knurled nut, loosen the hex nut at the end of the spring.

Picture 2

Holding the inner hex nut, closest to the main housing, turn the knurled nut clockwise for more vacuum in the tank and counterclockwise for less.

Picture 3

Once the desired vacuum has been attained, simply hold the knurled nut firmly with pliers while tightening the outer hex nut securely against it.

Recommended Pressure Setting: Liquid Cooled = 22", Air Cooled = 18"



BUILT TO WORK THE WAY YOU WORK!

60 Pik Rite Lane
Lewisburg, PA 17837

Call 800-326-9763 to talk to one of our parts experts today!
Hours: Monday through Friday, 8 AM to 5 PM, Eastern Time Zone