


1 ½” Pressure Relief Valve Setting Instructions



①



②

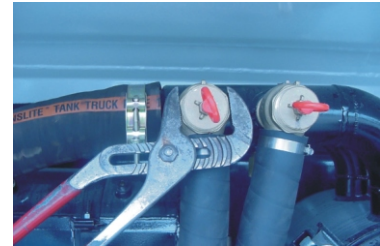

③

Picture 1

Using a wrench, loosen the large, outer locknut to allow for adjustment.

Picture 2

With a 5/8” wrench, turn the small hex nut clockwise to relieve pressure for less pressure in the tank. **Never adjust this valve when pressure is in the tank.** The end could fly off causing injury or death.

Picture 3

Once the desired, regulated, pressure has been attained, simply secure the outer lock nut that was loosened in step #2.

Recommended Pressure Setting: 10 PSI



BUILT TO WORK THE WAY YOU WORK!

60 Pik Rite Lane
Lewisburg, PA 17837

Call 800-326-9763 to talk to one of our parts experts today!
Hours: Monday through Friday, 8 AM to 5 PM, Eastern Time Zone