

BUILT TO WORK THE WAY YOU WORK



OPERATION & PARTS MANUAL



PIK RITE, INC.

60 PIK RITE LANE
LEWISBURG, PA 17837

FAX 570-523-8175
PHONE 800-326-9763
WWW.PIKRITE.COM/SPREADERS

PROUDLY MADE IN THE USA



March 19, 2018

Some illustrations may not represent the spreader model you have; however, the principles of operation and maintenance are the same. If you have questions specific to your spreader please contact your dealer.

(SPECIFICATIONS AND DESIGN SUBJECT TO CHANGE WITHOUT NOTICE)



Table of Contents

| | |
|---|-----------|
| OPERATOR'S MANUAL | 6 |
| SAFETY..... | 7 |
| PREPARING THE TRACTOR | 12 |
| PREPARING THE SPREADER..... | 15 |
| CONTROLS..... | 17 |
| ATTACHING THE SPREADER | 18 |
| DETACHING THE SPREADER | 19 |
| TRANSPORT | 20 |
| OPERATING THE SPREADER | 23 |
| LUBRICATION & MAINTENANCE | 26 |
| SPECIFICATIONS | 31 |
| PARTS MANUAL..... | 33 |
| 74418-1-01 Main Frame & Panels | 35 |
| 74418-1-01 Main Frame & Panels | 36 |
| 74418-1-02 Stone Guard | 37 |
| 74418-1-03 Guillotine Gate | 38 |
| 74418-1-04 Walking Beam | 39 |
| 74418-1-06 Tires & Wheels, 425/65R22.5 | 40 |
| 74418-1-05 Hubs & Spindles | 40 |
| 74418-1-06B Tires & Wheels, 500/50R22.5 | 41 |
| 74418-1-06A Tires & Wheels, 500/50R22.5 | 41 |
| 74418-1-07 Opt. Weight Scale System, NT460..... | 42 |
| 74418-1-07A Opt. Weight Scale System, GT400..... | 43 |
| 74418-2-01 Driveline, Front, 1000 rpm | 44 |
| 74418-2-01A Driveline, Front, 1000 rpm 1-3/4" CV | 45 |
| 74418-2-02 Main Drive Shaft..... | 46 |
| 74418-2-03 Vertical Beaters | 47 |
| 74418-2-03A Compost Beaters: Hydraulic Hoods/Trim Shield..... | 49 |
| 74418-2-03A Compost Beaters: Hydraulic Hoods/Trim Shield..... | 50 |

Pik Rite, Inc.
60 Pik Rite Lane
Lewisburg, PA 17837

Phone: 800-326-9763
Fax: 570-523-8175
www.pikrite.com

HP 380
Manure Spreader



| | | |
|-----------------------|--|-----------|
| 74418-2-03B | Compost Beaters: Hydraulic Hood & Turnbuckle | 51 |
| 74418-2-03B | Compost Beaters: Hydraulic Hood & Turnbuckle | 52 |
| 74418-2-03C | Compost Beaters: Hydraulic Hood | 53 |
| 74418-2-03C | Compost Beaters: Hydraulic Hood | 54 |
| 74418-2-04 | Web Chain Drive..... | 55 |
| 74418-2-04 | Web Chain Drive..... | 56 |
| 74418-2-05 | Web Chain Gearbox & Motor..... | 57 |
| 74418-2-05 | Web Chain Gearbox & Motor..... | 58 |
| 74418-2-06 | Driveline, Rear, w/ Clutch | 59 |
| 74418-2-07 | Gearbox, Main Beaters..... | 60 |
| 74418-3-01 | Hydraulic Web Drive | 61 |
| 74418-3-02 | Hydraulic Endgate | 62 |
| 74418-3-03 | Endgate Cylinders..... | 63 |
| 74418-3-04 | Opt. Control Valve, Open Center | 64 |
| 74418-3-05 | Opt. Remote Flow Control | 65 |
| 74418-3-06 | Hydraulic Hoods W/ Trim Shield | 66 |
| 74418-3-07 | Hydraulic Hoods W/O Trim Shield..... | 67 |
| 74418-4-01 | Safety Chain..... | 68 |
| 74418-4-02 | Accessories | 69 |
| 74418-4-03 | Decals on Front of Spreader..... | 70 |
| 74417-4-03 | Decals On Front Of Spreader..... | 70 |
| 74418-4-04 | Decals On Sides Of Spreader | 71 |
| 74418-5-01 | Electrical & Lighting..... | 72 |
| 74418-5-02 | Optional Side Extension | 73 |
| WARRANTY | | 77 |

Pik Rite, Inc.
60 Pik Rite Lane
Lewisburg, PA 17837

Phone: 800-326-9763
Fax: 570-523-8175
www.pikrite.com

HP 380
Manure Spreader



OPERATOR'S MANUAL

Pik Rite, Inc.
60 Pik Rite Lane
Lewisburg, PA 17837

Phone: 800-326-9763
Fax: 570-523-8175
www.pikrite.com

HP 380
Manure Spreader

SAFETY

**RECOGNIZE SAFETY INFORMATION**

This is the safety-alert symbol. When you see this symbol on your machine or in this manual be alert to the potential of personal injury.

Follow recommended precautions and safe operating practices

▲ DANGER


▲ WARNING

▲ CAUTION

UNDERSTAND SIGNAL WORDS

A signal word – DANGER, WARNING, or CAUTION-is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

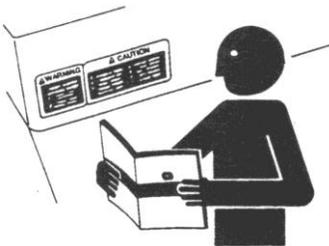**FOLLOW SAFETY INSTRUCTIONS**

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your Pik Rite dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your Pik Rite dealer.



KEEP SHIELDS IN PLACE

Do not operate spreader without safety shields in place.

Rotating parts can crush or dismember causing death or personal injury.


Disconnect PTO driveline and hydraulic lines from tractor before removing shields for adjustment or service.



PROTECT BYSTANDERS

Never operate the spreader near people.

Do not place rocks, timbers or other solid objects in the spreader. Objects can be thrown great distances causing injury to people.

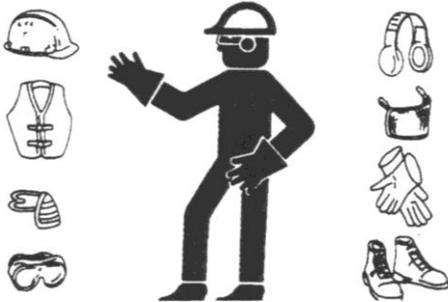


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

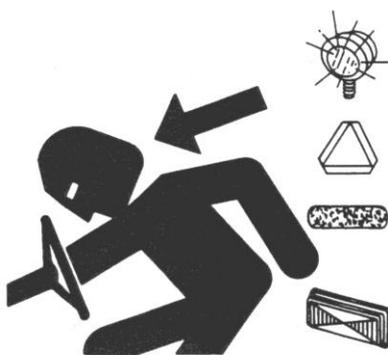

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Flashing warning lights and turn signals are recommended whenever driving on public roads. To increase visibility, use the devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items.



KEEP RIDERS OFF MACHINE

Riders are subject to injury such as being struck by foreign objects and being thrown off the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner




PARK SPREADER SAFELY

Park spreader on a level surface and block wheels.

Close endgate.

Secure jackstand with pin.

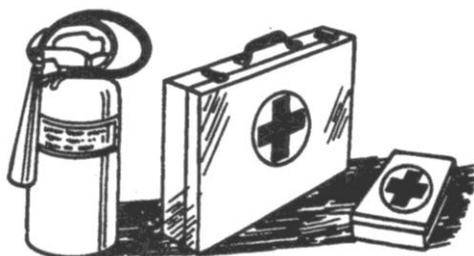

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.



Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your Pik Rite dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

OPERATE SPREADER SAFELY

Rotating parts can entangle or strike people, resulting in death or personal injury.



Never enter a spreader while in operation.

Operate the spreader from the tractor seat only.

Do not exceed load capacity of the spreader. (See Transport section)

Reduce speed when turning or traveling on rough terrain. Avoid traveling over loose fill, rocks, ditches or holes.

When working on inclines or slopes, travel uphill or downhill. Keep tractor in gear when traveling downhill.



STAY CLEAR OF RAISED ENDGATE

Contact with a lowering endgate can cause death or personal injury.

Lower endgate and disconnect hydraulic lines before servicing or adjusting.

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



STAY CLEAR OF ROTATING BEATER

Rotating beater can entangle or strike causing death or personal injury.

Do not clean out or service spreader while beater is rotating.

Disconnect PTO driveline and make sure all parts have stopped rotating before cleaning or servicing.



WARNING: DO NOT CUT OR WELD ON VERTICAL BEATER ATTACHMENT, SERIOUS INJURY OR DEATH COULD OCCUR WHEN OPERATING

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.



Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source.



SERVICE SPREADER SAFELY

To help prevent personal injury caused by unexpected movement, be sure to service spreader on level surface.

If spreader is connected to tractor, disengage PTO, engage parking brake and/or place transmission in "PARK," shut off engine and remove key.

If spreader is detached from tractor, block wheels and use safety stands to prevent movement.

Replace all shields after lubricating or servicing.

REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing loads equal to or less than the tractor.
- Reduce speed to 10 mph (16 km/h) when towing loads more than equal and up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines



PREPARING THE TRACTOR

APPROVED TRACTORS, MODEL HP 380

Row Crop Tractors with 160 HP PTO rating or larger are approved for operation with the HP 380 Spreader.

Utility Tractors are **NOT APPROVED** because of drawbar weight limitations and the inability to ballast the tractor enough to meet requirements for towing.

A drawbar support is required on any tractor with a drawbar size of no less than 1-1/2 x 3 in.

Tractor hydraulic oil reservoir must have capacity for 3.7 U.S. gal. net draw for a spreader with an endgate or 3.1 U.S. gal. without an endgate.

Tractor standby hydraulic pressure must be 1500 psi minimum.

Two selective control valve is required to operate the spreader.

A second selective control valve is required to operate the endgate.

CHOOSING CORRECT PTO SPEED

MODEL HP 380 – 1000 rpm only



IMPORTANT: Drive components can be damaged.

Under no circumstances should a machine equipped for 540 rpm

PTO be operated by a tractor equipped with 1000 rpm PTO.

Nor should a 1000 rpm PTO machine be operated with a


tractor equipped with 540 rpm PTO.

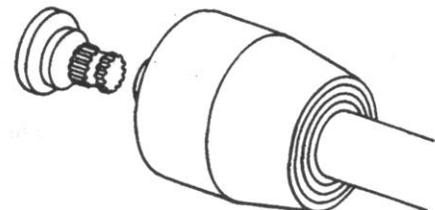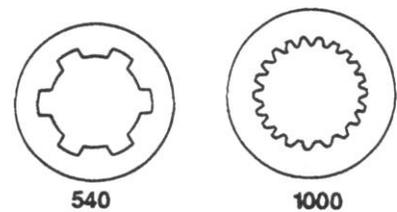

BALLASTING THE TRACTOR

CAUTION: Do not tow loads that weigh more than twice the tractor weight.
(See Recommended Maximum Towing Speed in Transport section.)

To ensure proper stability, adjust ballast and wheel spacing according to tractor operator's manual.

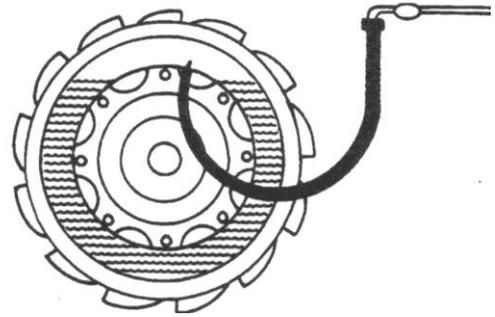


POSITIONING DRAWBAR

IMPORTANT: Tractor PTO and machine driveline can be damaged. Be sure drawbar length is properly set. If equipped with clevis, remove it. Lock drawbar along tractor centerline with offset down.

Clevis is needed

Adjust drawbar length (A) to help prevent driveline damage.

| PTO Speed | Dimension (A) |
|------------------|----------------|
| 1000 rpm x 1-3/8 | 406 mm (16in.) |
| 1000 rpm x 1-3/4 | 533 mm (20in.) |

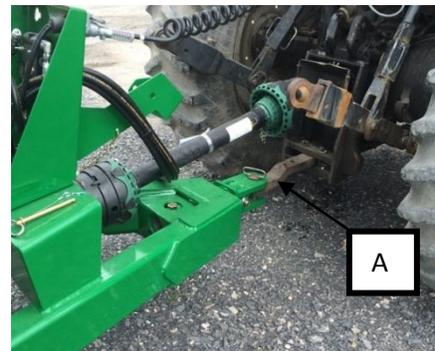

A tractor drawbar support is required on tractors with a drawbar size of 1-1/2 x 3 in. minimum

USING SELECTIVE CONTROL LEVERS TO CONTROL CHAIN SPEED

Apron Chain speed can be controlled by using the tractor's selective speed control lever to adjust spread rate up or down.

Adjust selective control valve lever to provide the slowest operating speed.
(See your tractor Operator's Manual)

Maximum hydraulic oil flow through the spreader apron chain motor is 15 gpm. Trying to force through more oil than this may create a pressure drop and could damage the hydraulic motor.

SETTING HYDRAULIC SPEED ENDGATE OPERATION

IMPORTANT: Excessive operating speed may cause machine damage. Adjust selective control valve lever to provide correct operating speed.

CHECKING TRANSMISSION/HYDRAULIC OIL LEVEL

Cycle all hydraulic cylinders fully two or three times.

Fully retract all cylinders.


Check transmission/hydraulic oil level.
(See your tractor's Operator's Manual)

PREPARING THE SPREADER

LUBRICATING THE MACHINE

Be sure the machine has been adequately lubricated.

(See Lubrication and Maintenance page.)

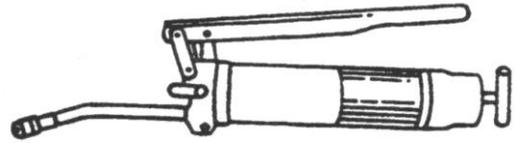

BRAKE ADJUSTMENT (HYDRAULIC)

*Contact your Hydra-Pull Dealer
for available brake kit*




TIGHTENING WHEEL HARDWARE

IMPORTANT: Operating the spreader with loose wheel hardware will damage the hub or wheel. Tighten hardware after initial transport, after one hour of operation and every fifty hours thereafter.

Tighten to 170 lb-ft of torque in the sequence shown.

| <u>Tire Size</u> | <u>Wheel Size</u> | <u>Tire Pressure</u> |
|------------------|-------------------|----------------------|
|------------------|-------------------|----------------------|

| | | |
|--------------------|--------------|---------|
| 425/65R22.5 | 22.5 x 11.75 | 115 PSI |
| 500/50R22.5 | 22.5 x 16 | 40 PSI |
| 16.5 x 16.1 14 ply | 14.00 x 16.1 | 48 PSI |

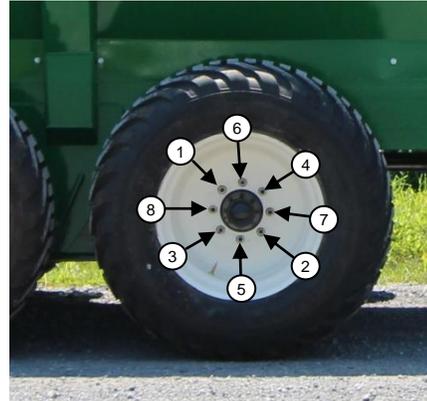

** Additional options may be available, please contact your dealer for more information*

CHECKING TIRES

1. Check tires daily for damage or noticeably low pressure.
2. Repair any cuts or breaks as soon as possible.
3. Protect tires from exposure to sunlight and petroleum products or chemicals.



CONTROLS

OPERATING THE BEATER

To start beater, engage PTO lever slowly, at low engine rpm.

To stop beater, disengage PTO. (See your tractor's Operator's Manual)

For best spreading results, operate the tractor engine at "PTO RATED" speed.

WARNING: Do not operate the apron chain without running the beaters as this may damage the spreader.

OPERATING THE ENDGATE

IMPORTANT: Contact of apron chain running with endgate closed will cause damage. To avoid contact with apron chain when running, endgate must be raised when running apron chain.

Operate the endgate with the second auxiliary control valve lever.



OPERATING APRON CHAIN

To run apron chain lock hydraulic control lever in operating position on tractor.

See your tractor's operating manual for information on how to control flow rates of your hydraulic system.

Maximum hydraulic oil flow through the spreader apron chain motor is 15 gpm. Trying to force through more oil than this may cause serious damage to motor (relief factory set at 1250 psi)



ATTACHING THE SPREADER


ATTACHING SPREADER

CAUTION: Help prevent personal injury caused by unexpected movement of the machine. Engage parking brake and/or place transmission in “PARK”, shut off engine, and remove key before working around hitch.

1. Attach with a 1-1/2 in. pin and secure.
(Top clevis required)

IMPORTANT: Shorten safety chain to allow only enough slack required for turning.


2. Lock safety hook onto chain.

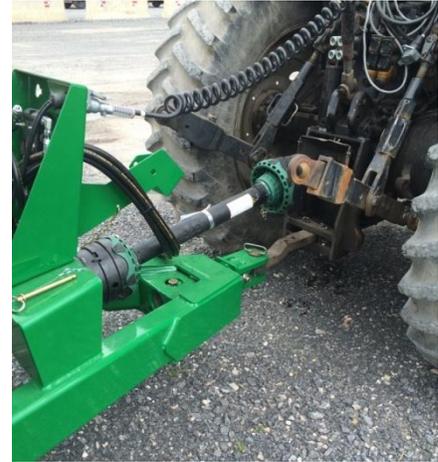

ATTACHING DRIVELINE

IMPORTANT: Avoid causing damage to shielding, **DO NOT** use bell on driveline to lift driveline into position.

1. Support driveline, cradling it in your hand.
2. Rotate driveline (C) or tractor PTO (B) to align splines.
3. Pull collar (C) rearward and push forward on bell (A) to engage driveline yoke with tractor PTO (B).
4. Pull back on PTO driveline shielding to be sure driveline is locked. **DO NOT** pull on collar, this will release latch.

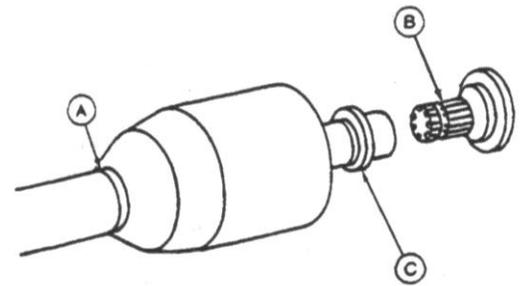

CONNECTING AIR HOSES (AIR ASSIST BRAKES)

1. Connect red line to supply port.
2. Connect blue line to service/control port.



CONNECTING HOSES (HYDRAULIC BRAKES)

1. Connect pressure hoses to pressure ports of hydraulic remote coupler.
2. Connect return hoses to return ports of hydraulic remote coupler.

(Relief factory set 1000psi)



DETACHING THE SPREADER

DETACHING THE SPREADER


DETACHING SPREADER

1. Secure jackstand in lift position
2. Detach safety chain
3. Remove hitch pin
4. Disconnect hoses. Store on spreader



DETACHING DRIVELINE

1. Support driveline (A) and pull rearward on collar (C) to release driveline from tractor PTO (B).
2. When possible store driveline in driveline cradle provided with machine.
3. Replace tractor PTO shields.

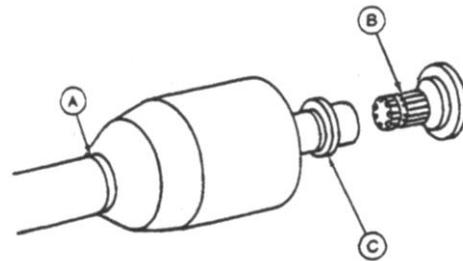


TRANSPORT

USING A SAFETY CHAIN

CAUTION: A safety chain will help control drawn equipment should it accidentally separate from the drawbar while transporting. Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning. See your Pik Rite dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine.

1. Attach safety tow chain

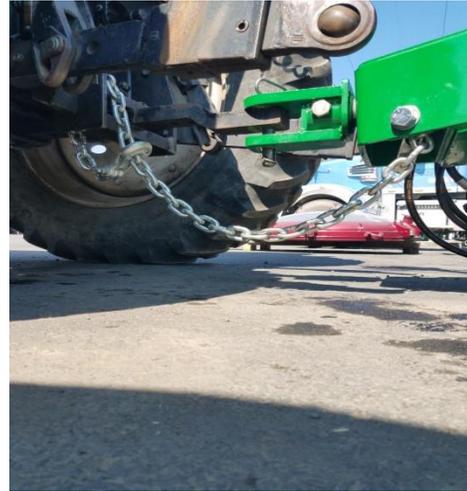

LIGHTING

CAUTION: When transporting the machine on a road or highway at night or during the day, use accessory lights and devices for adequate warning to operators of other vehicles. Check local governmental regulations. Keep safety items in good condition. Replace missing or damaged items.

Contact your Hydra-Pull Dealer for available lighting kit



TOWING LOADS


CAUTION: Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load is not equipped with brakes and weighs more than the tractor.



Follow recommended speed-weight ratio guidelines:

- Maximum speed is 20 mph (32 km/h) when towing loads equal to or less than the weight of the tractor.
- Reduce speed to 10 mph (16 km/h) when towing loads more than or up to double the tractor weight.
- **DO NOT** tow loads that exceed double the tractor weight.
- Use additional caution when towing loads under adverse road surface conditions (i.e. slippery or rough), when turning and/or on inclines.
- For proper tractor size and towing speed see the following “Recommended Maximum Towing Speed” chart.
- If necessary, add ballast as described in your tractor’s Operator’s Manual.

RECOMMENDED MAXIMUM TOWING SPEED

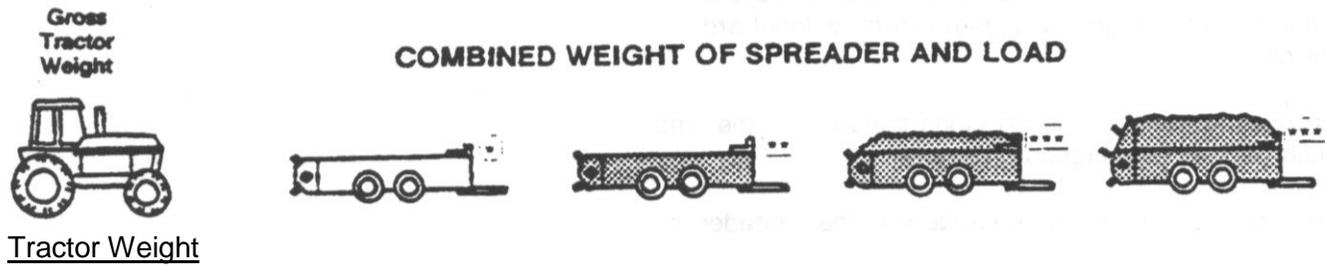

| Tractor Weight | Do Not Tow | Do Not Tow | Do Not Tow | Do Not Tow |
|------------------|------------|------------|------------|------------|
| (0-2997 lb) | Do Not Tow | Do Not Tow | Do Not Tow | Do Not Tow |
| (2998-5950 lb) | Do Not Tow | Do Not Tow | Do Not Tow | Do Not Tow |
| (5951-11021 lb) | Do Not Tow | Do Not Tow | Do Not Tow | Do Not Tow |
| (11022-12123 lb) | Do Not Tow | Do Not Tow | Do Not Tow | Do Not Tow |
| (12124-14769 lb) | Do Not Tow | Do Not Tow | Do Not Tow | Do Not Tow |
| (14770-22044 lb) | Do Not Tow | Do Not Tow | Do Not Tow | Do Not Tow |
| (22045-24910 lb) | (20 mph) | (10 mph) | (10 mph) | (10 mph) |
| (24911-29540 lb) | (20 mph) | (10 mph) | (10 mph) | (10 mph) |
| (29541 lb-Up) | (20 mph) | (10 mph) | (10 mph) | (10 mph) |

**Base Spreader Empty Load*

***Load struck level consisting of manure with high liquid content.
Calculated at 70 lb/cu ft*

****Load piled 381 mm (15 in.) above beater consisting of semi-solid type manure
Calculated at 55 lb/cu ft*

*****Load piled at 15 in. above optional upper beater consisting of semi-solid type manure.
Calculated at 55 lb/cu ft*

OPERATING THE SPREADER

PREOPERATING CHECKS

1. Be sure spreader does not contain any foreign objects
2. Check for correct hydraulic hookup. Raise endgate fully. Engage beaters, engage apron chain
3. Disengage apron chain, disengage beaters
4. Close endgate

LOADING THE SPREADER

CAUTION: Do not place rocks, timbers, or other solid objects in the spreader. Objects of this nature can damage the spreader and could also be thrown great distances causing possible injury to anyone standing in the vicinity.

Load front of spreader first, distributing load evenly.

When operating without an endgate, avoid loading manure against the beater.




PREPARE TO UNLOAD THE SPREADER

CAUTION: Help prevent personal injury. Be sure no one is near spreader and tractor before operating.

1. Start beater by engaging PTO slowly at low engine rpm. Increase to “PTO RATED” speed.

NOTE: For best spreading results, operate tractor at “PTO RATED” speed.

WARNING: Do not operate apron chain without running the beaters as this may damage the spreader

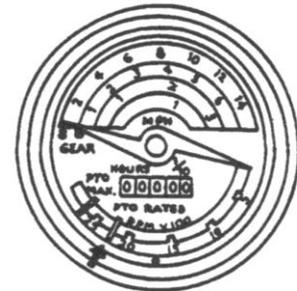

RAISE ENDGATE

IMPORTANT: Contact of apron chain with endgate will cause damage. To avoid contact with apron chain, endgate must be raised fully.

The endgate closes off the back end of the spreader to contain manure with high liquid content.

The endgate also prevents solid material from being piled tight against the beater.



UNLOADING SPREADER USING METERING VALVE

1. Set flow control on tractor hydraulics obtain desired rate of unload speed.

Note: Rate of spread is affected by both ground speed and unload speed. Experience will help you determine both gear selection and control knob setting.

2. When spreader is empty, disengage apron chain, disengage PTO, and lower endgate.

PRODUCING GOOD SPREADING RESULTS

1. Operate tractor engine at “PTO RATED” speed.
2. Do not overload beater. A clumpy spread pattern will result from too fast of an unload rate.
3. When operating without an endgate, avoid loading material against the beater. Otherwise, large clumps of material will be thrown out during the first few turns of the beater.

CLEANING SPREADER IN COLD WEATHER


When operating the spreader during extended periods of subfreezing temperatures, frozen material may build up on steel surfaces. This can prevent the beater from moving.

After completing spreading for the day, use the following cleaning procedure.

NOTE: Cleaning is only necessary during extended periods of subfreezing temperatures.

Remove material along edges of apron chain

Remove material buildup from endgate panel. Keep endgate arms clean to prevent freezing to side rails.

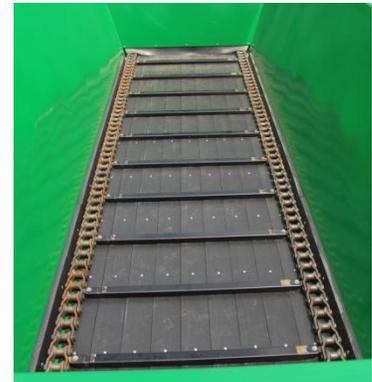

OPERATING THE SPREADER

CLEAN WALKING BEAM

When tire valve stems are mounted towards the inside, clean top of walking beams to prevent valve stem damage.



WARMING HYDRAULIC OIL TEMPERATURES BELOW 0°F (-18°C)

It is necessary to warm the hydraulic oil for proper spreader operation.

Follow the procedures in your tractor's Operator's Manual for warming hydraulic oil.

The following procedures apply only to tractors with a closed center hydraulic system.



BYPASSING SPREADER CONTROL VALVE

There will be a large hydraulic oil pressure drop across the auxiliary flow control valve when the oil is cold. Oil pressure available to hydraulic cylinders may be too low.

Try cycling the cylinders several times slowly so the cold oil in the cylinders is mixed with the warm oil in the tractor. In the event of extreme cold; you may need to bypass the control valve to do this. Be sure you begin by moving the cylinders very slowly.

Reconnect hoses to flow control valve.

LUBRICATION & MAINTENANCE

LUBRICATION & MAINTENANCE


LUBRICATING AND MAINTAINING SPREADER SAFELY

CAUTION: Help prevent personal injury caused by unexpected movement of the machine. If spreader is connected to tractor, disengage PTO, engage parking brake and/or place transmission in "PARK", shut off engine, and remove key. If spreader is detached, block wheels and use safety stands.

Replace all shields after lubricating or servicing.

OBSERVING INTERVALS

IMPORTANT: The intervals recommended are based on normal conditions. Severe or unusual conditions may require more frequent attention.

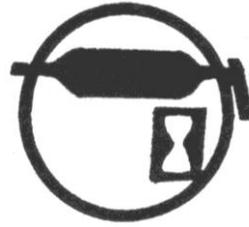


SELECTING GREASE

Depending upon the expected air temperature range during the service interval, use grease as shown on the adjoining temperature chart.

-SAE-Multipurpose High Temperature Grease with Extreme Pressure [EP] Performance with 3 to 5% molybdenum disulfide.

NOTE: Moly-type grease is recommended, however, if not available, a multipurpose grease is acceptable.

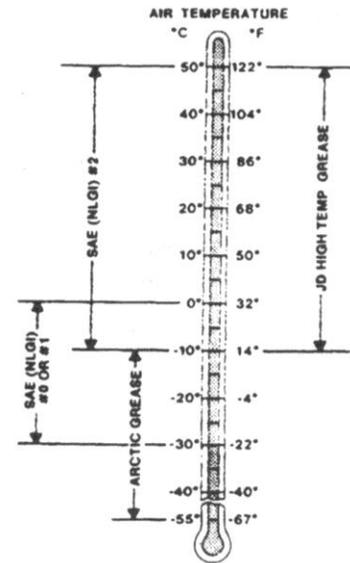


SELECTING GEAR CASE OIL

Depending upon the expected air temperature range during the drain interval, use oil viscosity shown on the adjoining temperature chart.

- API Service Classification GL-5
- Military Specification MIL-L-2105B
- Military Specification MIL-L-2105C

At temperatures below -35° [-31°], use arctic oils such as those meeting Military Specifications MIL-G-10324A.

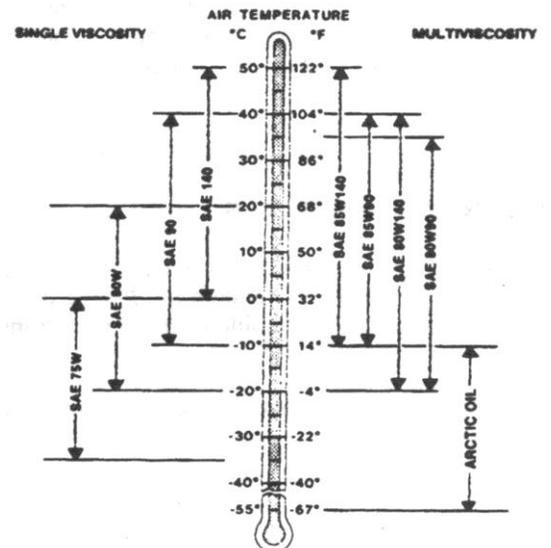

LUBRICATION & MAINTENANCE

SERVICE INTERVALS

Lubricate driveline every 8 hrs

- Lubricate top beater bearings every 40 hrs
- Check gear case oil level every 8 hrs
- Check tires every 8 hrs
- Check axle hub oil every 8 hrs
- Grease apron chain drive bearings & sprockets every 40 hrs

EVERY 50 HOURS

- Adjust apron chain
- Tighten wheel hardware
- Lubricate walking beam pivots

EVERY 250 HOURS

- Lubricate endgate pivots

SERVICE AS REQUIRED

- Adjust apron chain tension
- Slip the clutch

GEARBOX

- Change lubricant every 6,000 loads


In addition to the above referenced information, you are working with a central lube CV design on the primary that contains a special lubrication provision that needs to be well defined for the user so that extended life on the CV can be achieved.

The key point is that each CV has one zerk in a bearing cap and it is this zerk that is most important since it feeds the inboard cross kit as well as the the ball and socket of the CV. The user needs to understand that the zerk in the cap should receive **15-20 pumps** of grease each day while the other zerks in the joint

CV housing and telescoping members can operate with 5-6 pumps or until the seals purge. The plastic zerks feeding the shielding should also receive 3-4 pumps daily if shields are being restrained.

Primary Driveline (to Tractor) Lubricate fittings D1 through D6 every eight hours of operation.

Secondary Driveline (under spreader) Lubricate as above including overrunning clutch.

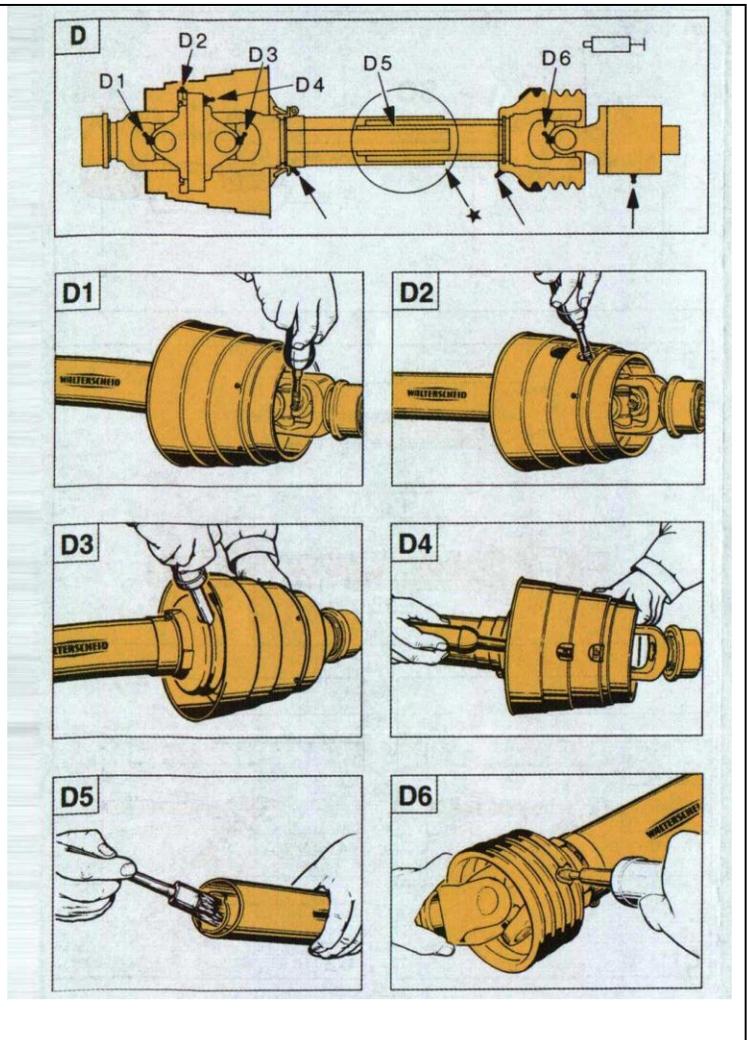

NOTE: Lubrication step D5 is only necessary when driveline does not have grease fitting. Separate front and rear halves of driveline and brush with grease.


LUBRICATION & MAINTENANCE

CHECK GEAR CASE OIL LEVEL

With spreader on level ground, check oil level at the sight glass on the center gearcase. "A"




Add recommended oil as needed. (See Selecting Gear Case Oil)

To add oil, remove fill cap at the top of the gearcase "B"

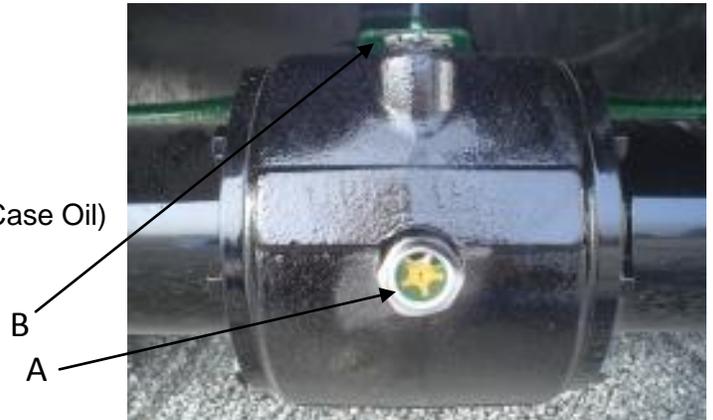

GREASE TOP BEATER BEARINGS

Grease the two bearings at the top of the vertical beaters every 8 hours of operation. Rear grease bank on beater side panel

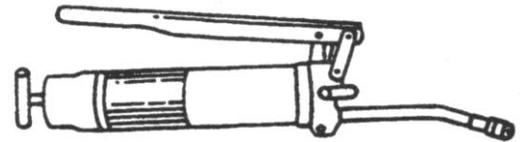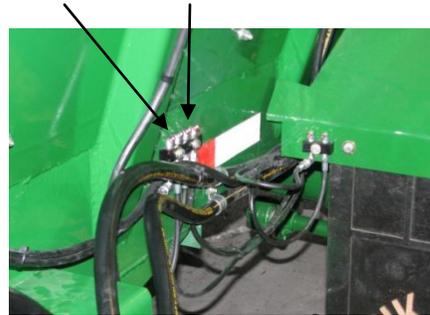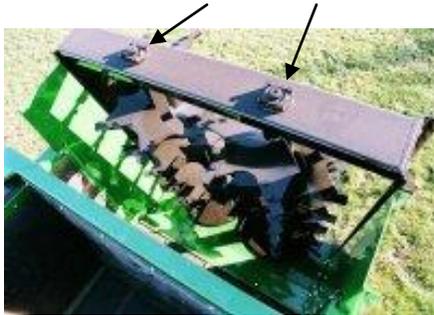

CHECKING TIRES

1. Check tires daily for damage or noticeably low pressure.
2. Repair any cuts or breaks as soon as possible.
3. Protect tires from exposure to sunlight and petroleum products or chemicals.

| <u>Tire Size</u> | <u>Wheel Size</u> | <u>Tire Pressure</u> |
|--------------------|-------------------|----------------------|
| 425/65R22.5 | 22.5 x 11.75 | 115 PSI |
| 550/60R22.5 | 22.5 x 16 | 40 PSI |
| 16.5 x 16.1 14 ply | 14.00 x 16.1 | 48 PSI |



LUBRICATION & MAINTENANCE

LUBRICATE WALKING BEAM PIVOTS


1. Place a jack under the spreader main frame.
2. Raise spreader enough to relieve weight from walking beam.
3. Lubricate grease bank (A) with Moly High Temperature/Extreme Pressure Grease.



TIGHTENING WHEEL HARDWARE

Operating the spreader with loose wheel hardware will damage the hub or wheel. Tighten hardware after initial transport, after one hour of operation, and every fifty hours thereafter.

Tighten to 170 lb.-ft. in the sequence shown.

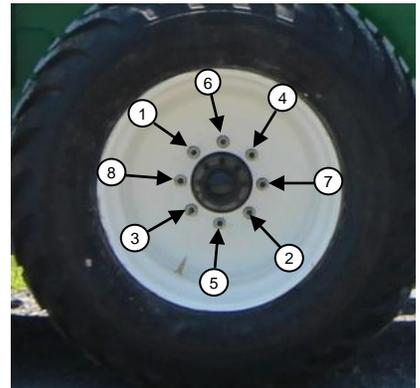

LUBRICATE CHAIN DRIVE


Before long periods of storage always oil the chain. Run the chain with both ball valves fully open for 5 minutes. Approximately usage will be a quart of oil every lubrication cycle.



LUBRICATION & MAINTENANCE

LUBRICATE THE SIX PILLOW BLOCKS UNDER THE SPREADER THAT CARRY THE MAIN POWER SHAFT, USING CENTRAL GREASE LOCATION

1. Lubricate grease fitting with Moly High Temperature/Extreme Pressure Grease.

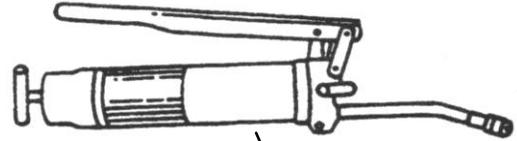

LUBRICATE WALKING BEAMS USING GREASE BANKS ATTACHED TO THE REAR OF THE FENDERS, TWO ON EACH SIDE



MAINTAINING SLIP CLUTCH, WALTERSCHEID

The clutch is preset and is not field adjustable.

If you determine that your slip clutch needs maintenance or adjustment, contact your dealer.



LUBRICATE HITCH EVERY 40 HRS



SPECIFICATIONS

SPECIFICATIONS

| | |
|--|--|
| Tractor Size (Minimum recommended) | 100 hp PTO |
| Weight Spreader, Complete with Implement tires and all Attachments | 11,500 lb |
| Load Capacity | 11.5 tons |
| Volume Capacity Struck Level Heaped Load With Side Extensions | 276 cu. ft. / 260 bu. 427 cu. ft. / 380 bu. adds 99.5 cu. ft / 80 bu |
| Beater Speed | 420 rpm |
| Unloading Speed | 0-15.21 ft/min Infinitely Variable |
| Driveline | Shielded 1000 rpm |

(Specifications and design subject to change without notice)



PARTS MANUAL

Pik Rite, Inc.
60 Pik Rite Lane
Lewisburg, PA 17837

Phone: 800-326-9763
Fax: 570-523-8175
www.pikrite.com

HP 380
Manure Spreader

DIRECTION ARROW

ARROWS ARE USED WITH ILLUSTRATIONS TO INDICATE THE FRONT OF THE UNIT. "RIGHT-HAND" AND "LEFT-HAND" SIDES ARE DETERMINED BY FACING THE DIRECTION OF MACHINE FORWARD TRAVEL.

BOX ENCLOSED ILLUSTRATIONS

A REFERENCE NUMBER, SHOWN IN THE PARTS LIST, IS ASSIGNED TO A BOX ENCOMPASSING ALL PARTS SOLD AS A SERVICE ASSEMBLY.


REFERENCE NUMBER IDENTIFICATION


000-099 PARTS USED FOR ASSEMBLY
100-199 BOLTS & FASTENERS
800-899 REPLACEMENT PARTS OR SERVICE ASSEMBLIES –
USED TO REPLACE OR REBUILD COMPONENTS OF THE
MACHINE

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|------------------------------------|-------------|
| 1 | 1 | MAIN FRAME | PR70350 |
| 2 | 1 | BELTING BAR | PR70337 |
| 3 | 1 | BELTING, BOT. BACK | PR70336 |
| 4 | 1 | BELTING, FRONT | PR70314 |
| 5 | 1 | BELTING BAR | PR70303 |
| 6 | 2 | ENDGATE PIN | PR70302 |
| 7 | 1 | BELTING, BOT. BACK | PR70301 |
| 8 | 2 | BOTTOM BUMPER RAIL | PR70295 |
| 9 | 2 | CYLINDER BRACKET | PR70293 |
| 10 | 1 | BELTING BAR | PR70280 |
| 11 | 2 | BUMPER, TOP RAIL | PR70396 |
| 12 | 1 | POLY BOARD, LH | PR70274 |
| 13 | 8 | POLY BOARD | PR70273 |
| 14 | 1 | POLY BOARD, RH | PR70272 |
| 15 | 1 | HITCH | PR70097 |
| 16 | 1 | HITCH SHAFT, HARDENED | PR63101 |
| 19 | 1 | SPACING BAR | PR70317 |
| 18 | 1 | FLAT BAR | PR70308 |
| 17 | 1 | FRONT FLOOR TRIM | PR70307 |
| 111 | 10 | 1/4-20 HEX FIN NUT ZC | BL-4-N |
| 110 | 10 | 1/4 SPLIT LW ZC | BL-4-LW |
| 109 | 4 | 3/8-16 X 1 CARRIAGE BOLT G5 ZC | BL-6-100-C |
| 108 | 18 | 3/8-16 X 2-1/2 HH C/S G5 ZC | BL-6-250-H |
| 107 | 13 | 3/8-16 X 1-1/4 CARRIAGE BOLT G5 ZC | BL-6-125-C |
| 106 | 24 | 3/8-16 X 1-3/4 CARRIAGE BOLT G5 ZC | BL-6-175-C |
| 105 | 10 | 1/4-20 X 1-1/2 CARRIAGE BOLT G5 ZC | BL-4-150-C |
| 104 | 130 | 3/8-16 X 1-1/2 CARRIAGE BOLT G5 ZC | BL-6-150-C |
| 103 | 10 | 1/4 USS FW ZC | BL-4-FW |
| 102 | 207 | 3/8 SAE FW ZC | BL-6-SW |
| 101 | 189 | 3/8 SPLIT LW ZC | BL-6-LW |
| 100 | 189 | 3/8-16 HEX NUT ZC | BL-6-N |


74418-1-01

Main Frame & Panels

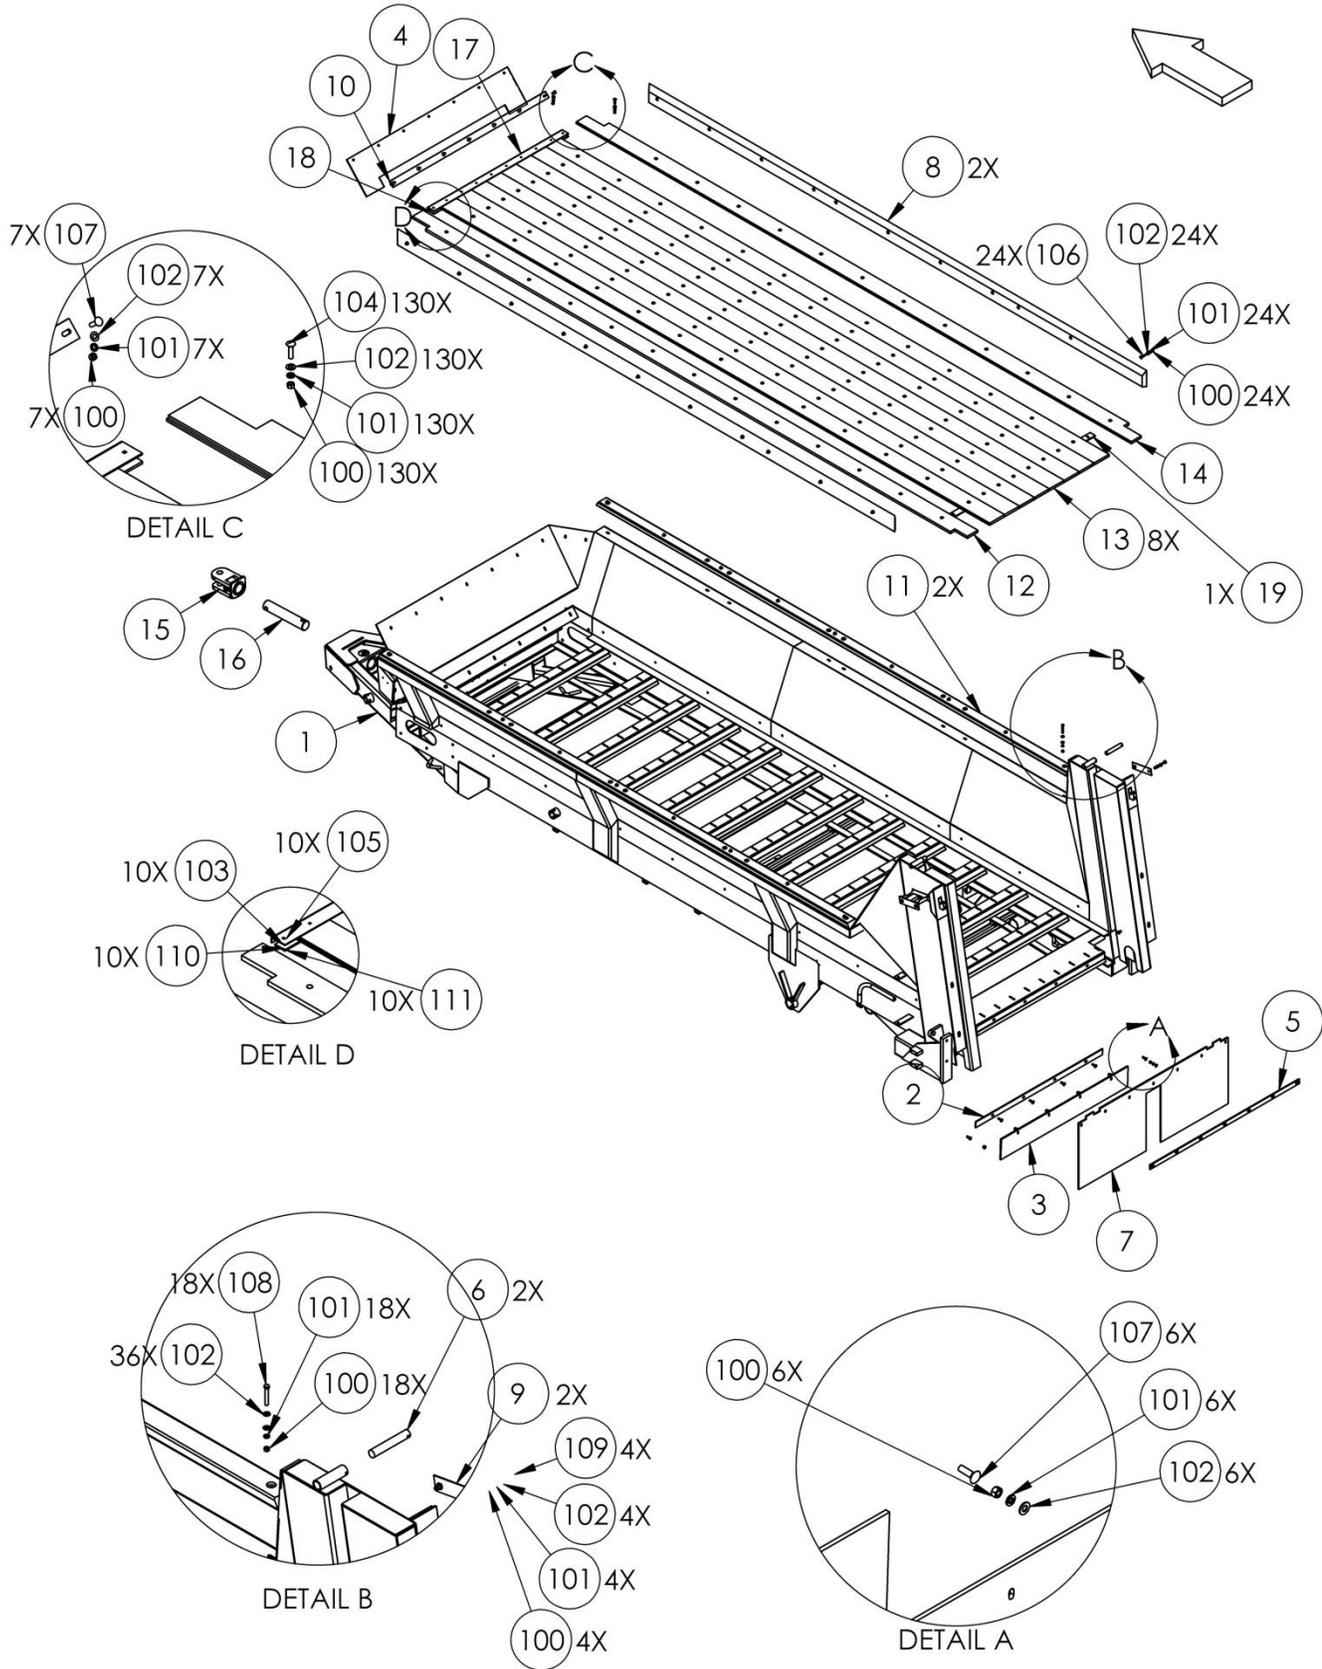


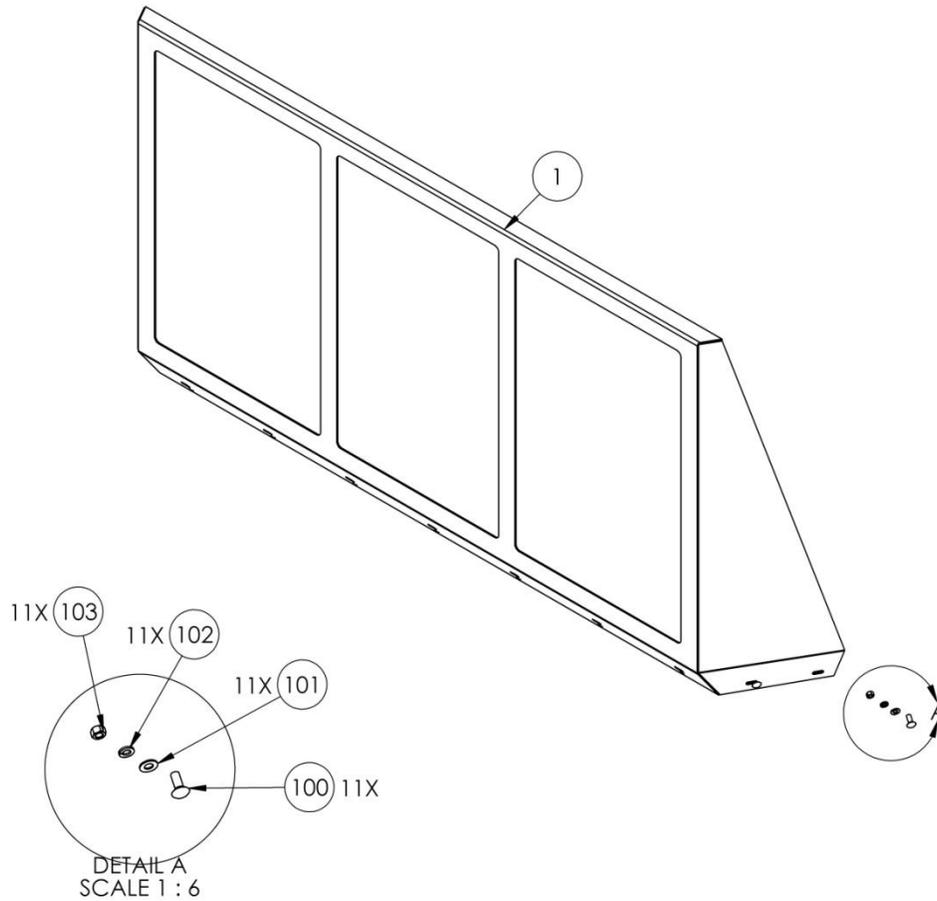

| ITEM NO. | EXPLODED/QTY. | DESCRIPTION | PART NUMBER |
|----------|---------------|--------------------------------|-------------|
| 1 | 1 | ROCK GUARD | PR70385 |
| 100 | 11 | 3/8-16 X 1 CARRIAGE BOLT G5 ZC | BL-6-100-C |
| 101 | 11 | 3/8 SAE FW ZC | BL-6-SW |
| 102 | 11 | 3/8 SPLIT LW ZC | BL-6-LW |
| 103 | 11 | 3/8-16 HEX NUT ZC | BL-6-N |

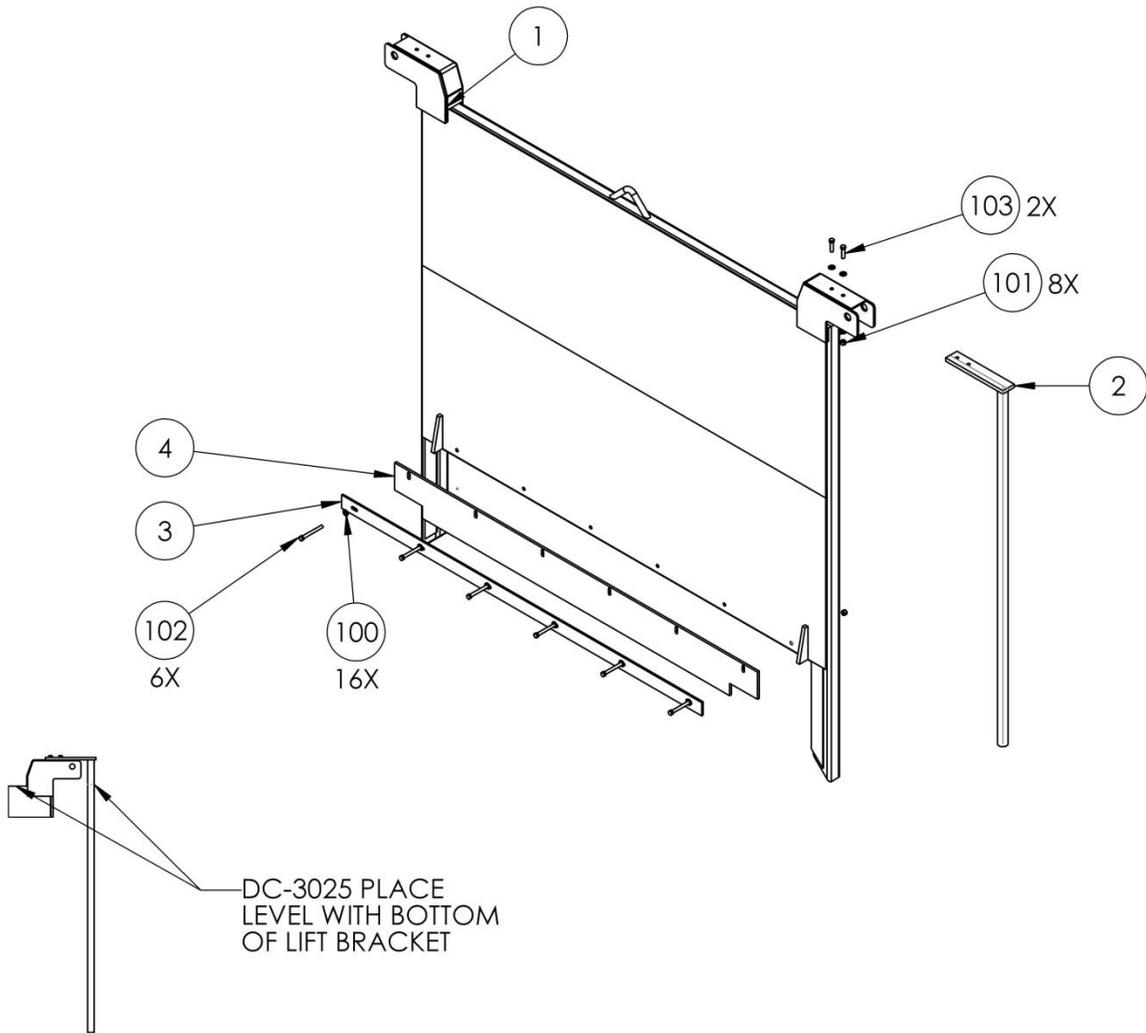


| ITEM NO. | QTY. | DESCRIPTION | PART NUMBER |
|----------|------|-------------------------------|-------------|
| 1 | 1 | GUILLOTINE GATE | PR70381 |
| 2 | 1 | MEASURING STICK | PR70366 |
| 3 | 1 | BELTING BAR | PR70284 |
| 4 | 1 | GATE BELTING | PR70282 |
| 5 | 4 | RED AND WHITE REFLECTIVE TAPE | DC-3025 |
| 100 | 16 | 3/8 SAE FW ZC | BL-6-SW |
| 101 | 8 | 3/8-16 FIN H LN NE A563 GA ZC | BL-6-LN |
| 102 | 6 | 3/8-16 X 3-1/2 HEX CAP G5 ZC | BL-6-350-H |
| 103 | 2 | 3/8-16 X 1-1/2 HEX CAP G5 ZC | BL-6-150-H |

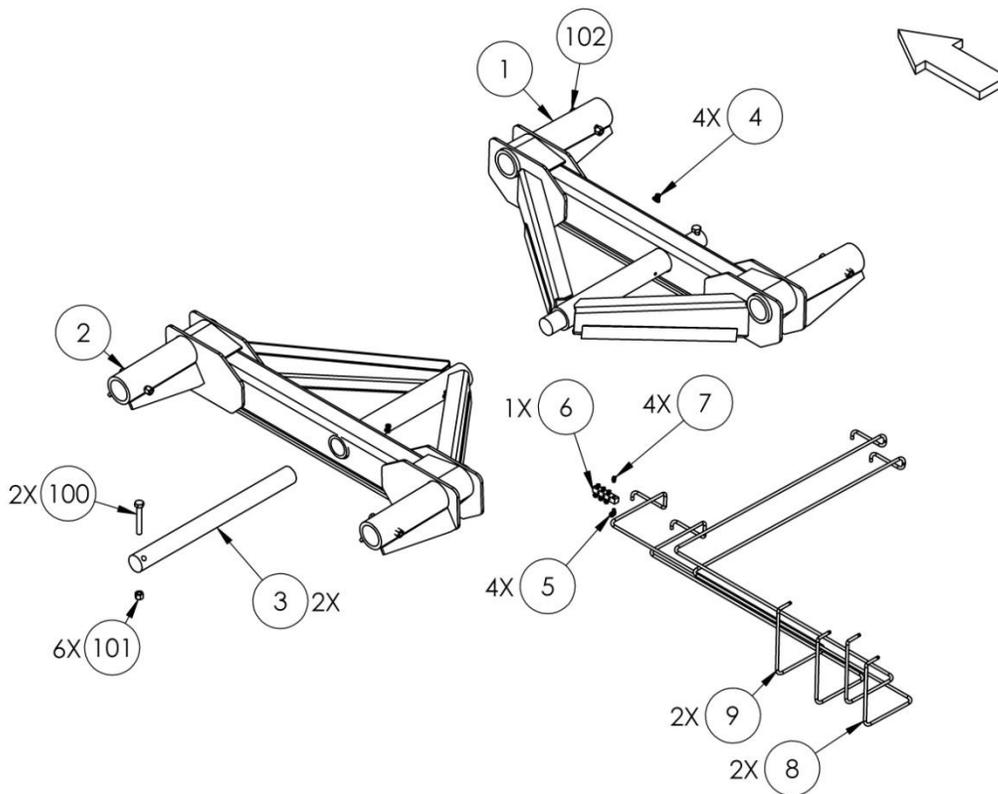

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|--|---------------|
| 1 | 1 | ROCKER, RH | WHL-8119 |
| 2 | 1 | ROCKER, LH | WHL-8120 |
| 3 | 2 | PIN | PIN-8115 |
| 4 | 4 | 1/8MP X 1/8 FPX 90° | A-1501-2-2 |
| 5 | 4 | 1/8 MP X 1/8 FPX 45° | A-1503-2-2 |
| 6 | 1 | 4" GREASE MANIFOLD | GF-4-4 |
| 7 | 4 | GREASE FITTING 1/8 NPT 45° | GF-1827-45 |
| 8 | 2 | 1/8" HOSE X 1/8" MP X 1/8" MP X 90" LONG | H2-90-2MP-2MP |
| 9 | 2 | 1/8" HOSE 1/8" MP X 1/8" MP X 70" LONG | H2-70-2MP-2MP |
| 100 | 2 | 5/8-11 X 4-1/2 HHCS G8 ZC | BL-10-450-8 |
| 101 | 6 | 5/8-11 HEX LN NE ZC | BL-10-LN |
| 102 | 4 | 5/8-11 X 5 BOLT HH G5 ZC | BL-10-500-H |

74418-1-05


Hubs & Spindles

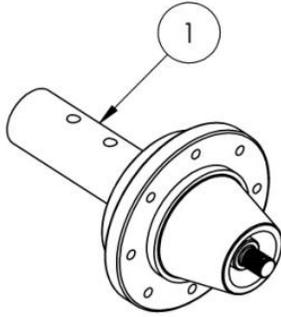

NOTE:
MANY OF THESE PARTS ARE SPECIAL
ORDER ONLY. CONSULT YOUR DEALER
FOR AVAILABILITY


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|----------------------|--------------|
| 1 | 4 | HUB ASSEMBLY | WHL-3000 |
| 801 | 4 | SPINDLE 3" x 16" | WHL-3001 |
| 802 | 4 | SEAL | WHL-3000G |
| 803 | 4 | INNER CONE | WHL-3000C |
| 804 | 4 | INNER CUP | WHL-3000A |
| 805 | 4 | OUTER CUP | WHL-3000B |
| 806 | 4 | OUTER CONE | WHL-3000D |
| 807 | 4 | SPINDLE WASHER | WHL-3000K |
| 808 | 4 | SPINDLE NUT | WHL-3000J |
| 809 | 4 | HUB CAP | WHL-3000H |
| 810 | 4 | COTTER PIN 3/16 x 2" | PIN-C3-16-32 |
| 811 | 32 | LUG NUT | WHL-3000F |
| 812 | 32 | STUD BOLT | WHL-3000E |
| 813 | 4 | WHEEL BEARING KIT | WHL-3000K |

74418-1-06 Tires & Wheels, 425/65R22.5

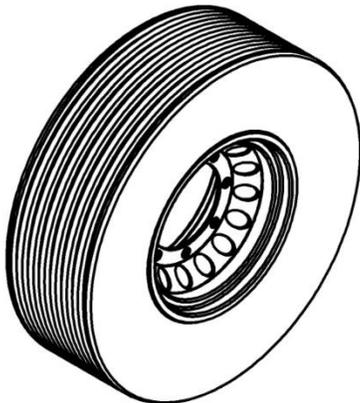


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|-------------------------------|-------------|
| 1 | 4 | 425/65R22.5 TIRE & WHEEL ASSY | WHM-7109 |
| 801 | 4 | 22.5 X 11.75 WHEEL | WHL-7106 |
| 802 | 4 | 425-65R22.5 TRUCK TIRE | WHT-7105 |

74418-1-06A Tires & Wheels, 500/50R22.5


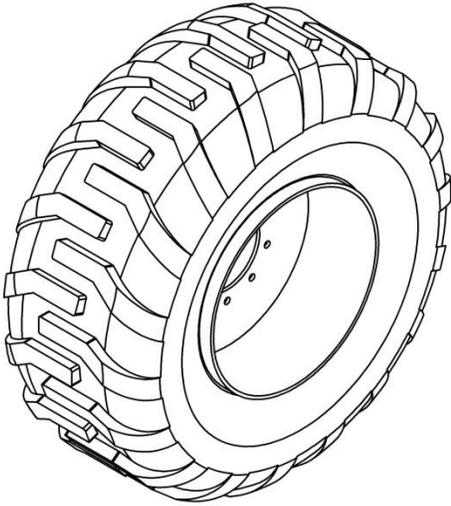


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|-------------------------------|-------------|
| 1 | 4 | 500/50-22.5 TIRE & WHEEL ASSY | WHM-7111 |
| 801 | 4 | WHEEL, 22.5 X 16 6mm | WHL-7111 |
| 802 | 4 | TIRE, 500/50-22.5 | WHT-7111 |



74418-1-06B Tires & Wheels, 500/50R22.5

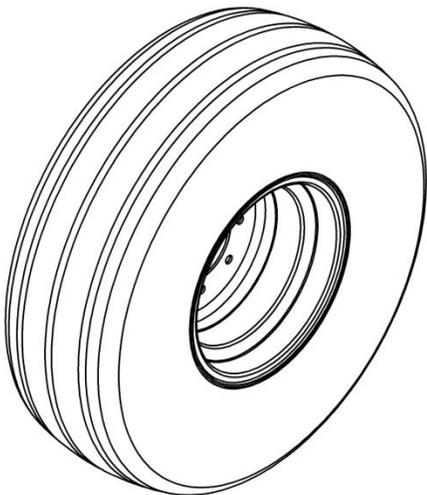


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|----------------------------|-------------|
| 1 | 4 | Tire and Wheel Assembly | WHM-1514 |
| 801 | 4 | 16 X 14 WHEEL 8-8-6 | WHL-1614 |
| 802 | 4 | 16.5 X 16.1 IMPLEMENT TIRE | WHT-1614 |

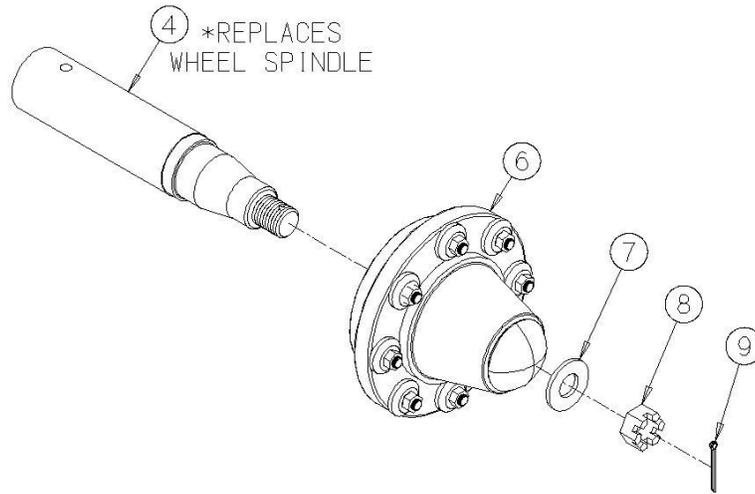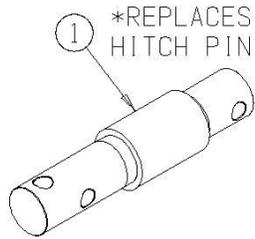

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|--|--------------|
| 1 | 1 | CELL | SWS-4605-001 |
| 2 | 1 | J-BOX 6 PT | SWS-4605-003 |
| 3 | 4 | SPINDLE SCALE BUSHING | PR90012 |
| 4 | 4 | CELL HUB | SWS-4606-001 |
| 5 | 4 | WHEEL HUB SEAL | WHL-1210-LCS |
| 6 | 4 | COMPLETE HUB, w/o SPINDLE | WHL-1210-HC |
| 7 | 4 | WASHER | WHL-1210H |
| 8 | 4 | FLANGE NUT | WHL-1210G |
| 9 | 4 | COTTER PIN | WHL-1210I |
| 10 | 1 | J BOX CABLE, 9m | SWS-4605-004 |
| 11 | 1 | POWER CABLE, 4-WIRE, 3m CABLE | SWS-4605-005 |
| 12 | 1 | INDICATOR, w/ AUTOLOG, NT460 | SWS-4604-003 |
| 13 | 1 | RAIL MOUNT, MONITOR MOUNT | SWS-4604-006 |
| 14 | 1 | INDICATOR MOUNT, NT460, BRACKET- SCR# 10X5/8 FHSTS BLACK ZP | SWS-403780 |
| 15 | 1 | INDICATOR MOUNT, NT460, BRACKET- EZ3 PLASTIC RAIL | SWS-404353 |

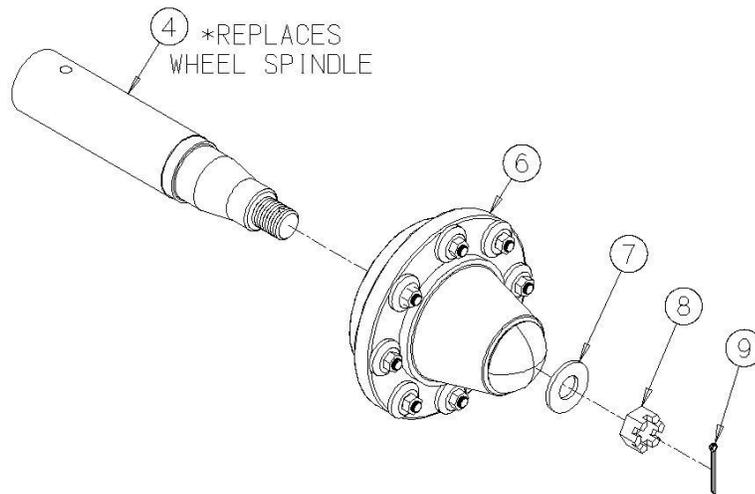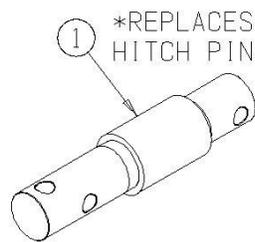


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|--|--------------|
| 1 | 1 | CELL | SWS-4605-001 |
| 2 | 1 | GT400 INDICATOR, w/ RS232 | SWS-4605-006 |
| 3 | 4 | SPINDLE SCALE BUSHING | PR90012 |
| 4 | 4 | CELL HUB | SWS-4606-001 |
| 5 | 4 | WHEEL HUB SEAL | WHL-1210-LCS |
| 6 | 4 | COMPLETE HUB, w/o SPINDLE | WHL-1210-HC |
| 7 | 4 | WASHER | WHL-1210H |
| 8 | 4 | FLANGE NUT | WHL-1210G |
| 9 | 4 | COTTER PIN | WHL-1210I |
| 10 | 1 | J-BOX 6 PT | SWS-4605-003 |
| 11 | 1 | J BOX CABLE, 9m | SWS-4605-004 |
| 12 | 1 | POWER CABLE, 4-WIRE, 3m CABLE | SWS-4605-005 |
| 13 | 1 | INDICATOR MOUNT, GT400, BRACKET-STR TOP MOUNT | SWS-403769 |
| 14 | 1 | INDICATOR MOUNT, GT400, BRACKET-ROBO MOUNTING | SWS-403980 |

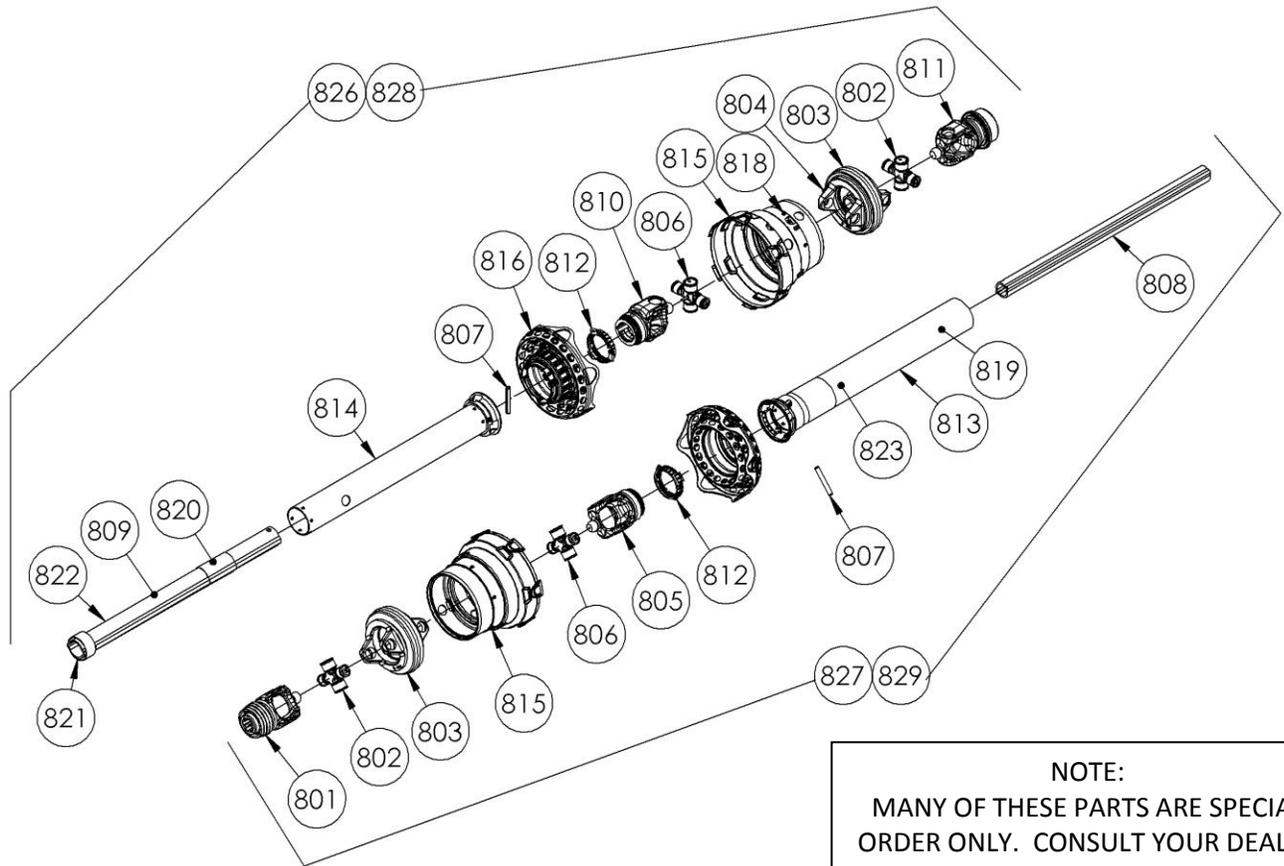

NOTE:
MANY OF THESE PARTS ARE SPECIAL
ORDER ONLY. CONSULT YOUR DEALER
FOR AVAILABILITY


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER | ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|----------------------------------|-------------|----------|-----|-----------------------------|-------------|
| 1 | 1 | DRIVELINE, 1-3/8-21, 2500 SERIES | PTS-1015 | 815 | 2 | CV GUARD & BEARING ASSY | PTS-1015L |
| 801 | 1 | YOKE ASG | PTS-1015A | 816 | 2 | FLEX NET & GUARD ASSY | PTS-1015M |
| 802 | 2 | CROSS & BEARING KIT | PTS-1015B | 817 | 1 | PTO SHIELD SAFETY CHAIN | PTS-1002K |
| 803 | 2 | DOUBLE YOKE END | PTS-3001-Y | 818 | 14 | SCREW | PTS-1010K |
| 804 | 2 | ZERK, DOUBLE YOKE | PTS-1008C | 819 | 1 | DECAL, OUTER | PTS-1010L |
| 805 | 1 | INBOARD YOKE S4 | PTS-1015C | 820 | 1 | DECAL, INNER | PTS-1010M |
| 806 | 2 | CROSS & BEARING KIT | PTS-1015D | 821 | 1 | SUPPORT BEARING | PTS-1021H |
| 807 | 2 | SPRING PIN 10 X 75 | PTS-1014C | 822 | 1 | ZERK | PTB-1014L |
| 808 | 1 | INNER PROFILE S4LGA | PTS-1015E | 823 | 1 | LUBRICATION DECAL | PTS-1021P |
| 809 | 1 | OUTER PROFILE S5GL | PTS-1015F | 824 | 0 | AS COLLAR KIT | PTS-8100E |
| 810 | 1 | INBOARD YOKE S5 | PTS-1015G | 825 | 0 | ASG COLLAR KIT | PTS-1008R |
| 811 | 1 | YOKE ASG | PTS-1015H | 826 | 1 | DRIVELINE, FRONT HALF | PTS-1015FH |
| 812 | 2 | PTO SHIELD BEARING RING | PTS-1002J | 827 | 1 | DRIVELINE, REAR HALF | PTS-1015RH |
| 813 | 1 | GUARD TUBE OUTER | PTS-1015J | 828 | 1 | SHIELD COMPLETE, FRONT HALF | PTS-1015FS |
| 814 | 1 | GUARD TUBE INNER | PTS-1015K | 829 | 1 | SHIELD COMPLETE, REAR HALF | PTS-1015RS |

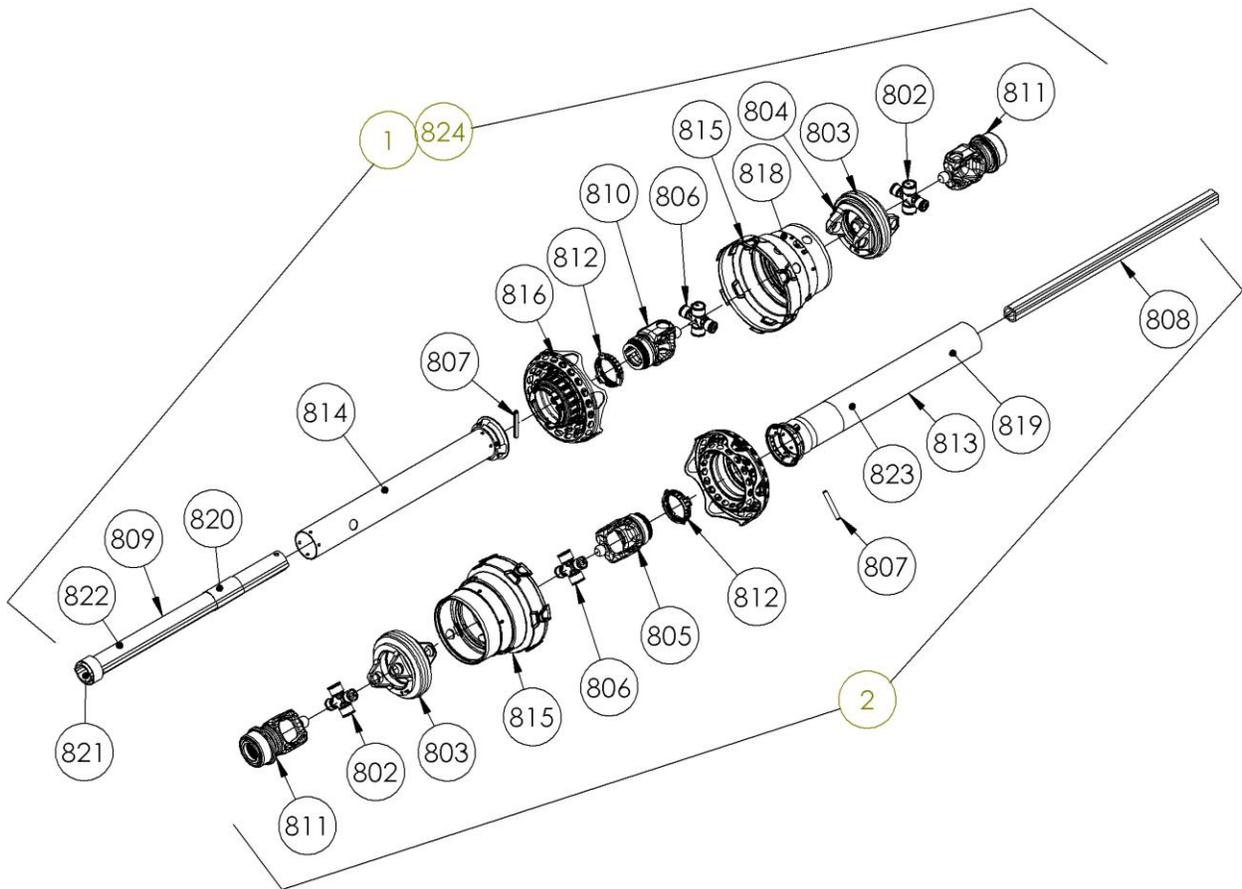

| ITEM NO | QTY | DESCRIPTION | PART NUMBER | ITEM NO | QTY | DESCRIPTION | PART NUMBER |
|---------|-----|-------------------------|-------------|---------|-----|-----------------------------|-------------|
| 1 | 1 | DRIVELINE, FRONT HALF | PTS-1016FH | 813 | 1 | GUARD TUBE OUTER | PTS-1016C |
| 2 | 1 | DRIVELINE, REAR HALF | PTS-1015RH | 814 | 1 | GUARD TUBE INNER | PTS-1016D |
| 802 | 2 | CROSS & BEARING KIT | PTS-1015B | 815 | 2 | CV GUARD & BEARING ASSY | PTS-1015L |
| 803 | 2 | DOUBLE YOKE END | PTS-3001-Y | 816 | 2 | FLEX NET & GUARD ASSY | PTS-1015M |
| 804 | 2 | ZERK, DOUBLE YOKE | PTS-1008C | 817 | 1 | PTO SHIELD SAFETY CHAIN | PTS-1002K |
| 805 | 1 | INBOARD YOKE S4 | PTS-1015C | 818 | 18 | SCREW | PTS-1010K |
| 806 | 2 | CROSS & BEARING KIT | PTS-1015D | 819 | 1 | DECAL, OUTER | PTS-1010L |
| 807 | 2 | SPRING PIN 10 X 75 | PTS-1014C | 820 | 1 | DECAL, INNER | PTS-1010M |
| 808 | 1 | INNER PROFILE S4LGA | PTS-1016A | 821 | 1 | SUPPORT BEARING | PTS-1021H |
| 809 | 1 | OUTER PROFILE | PTS-1016B | 822 | 1 | ZERK | PTB-1014L |
| 810 | 1 | INBOARD YOKE S5 | PTS-1015G | 823 | 1 | LUBRICATION DECAL | PTS-1008Q |
| 811 | 2 | YOKE ASG | PTS-1015H | 824 | 1 | SHIELD COMPLETE, FRONT HALF | PTS-1016FS |
| 812 | 2 | PTO SHIELD BEARING RING | PTS-1002J | | | | |

74418-2-02


Main Drive Shaft

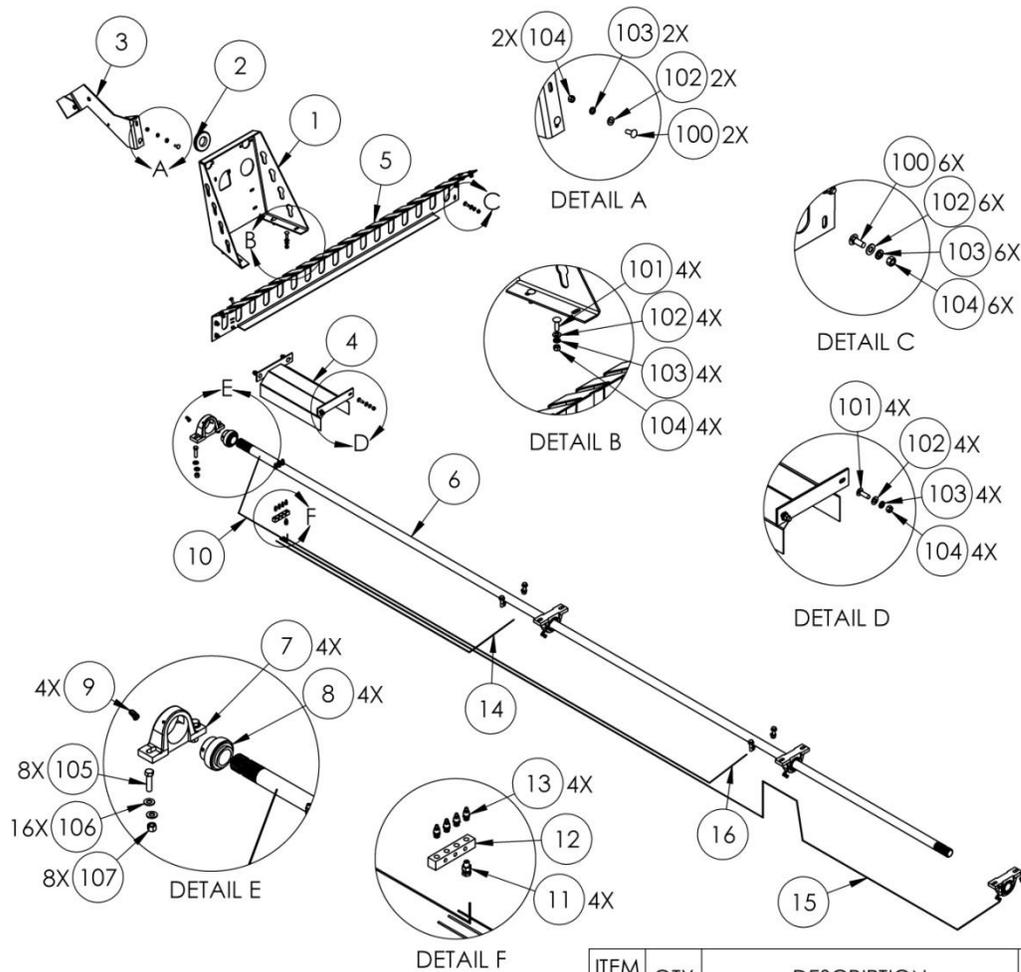

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|-------------------------------|---------------|
| 1 | 1 | HOSE MOUNT | PR70269 |
| 2 | 1 | 3.5" GROMMET | EL-0041 |
| 3 | 1 | PTO HOLDER ASM | PR70087 |
| 4 | 1 | DRIVE SHAFT SHIELD | PR70294 |
| 5 | 1 | HAND GUARD | PR70354 |
| 6 | 1 | MAIN DRIVE SHAFT | PR70332 |
| 7 | 4 | BEARING HOUSING | BR-085-RAK |
| 8 | 4 | 1.75" BEARING | BR-175-085-1 |
| 9 | 4 | 1/8MP X 1/8 FPX 90° | A-1501-2-2 |
| 10 | 1 | 1/8 HOSE, 1/8MP X 1/8MP X 40L | H2-40-2MP-2MP |
| 11 | 4 | 1/8 MP X 1/8 FPX | A-1404-2-2 |
| 12 | 1 | 4" GREASE MANIFOLD | GF-4-4 |

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|------------------------------------|----------------|
| 13 | 4 | GREASE FITTING 1/8NPT | GF-1827 |
| 14 | 1 | 1/8 HOSE, 1/8MP X 1/8MP X 80L | H2-80-2MP-2MP |
| 15 | 1 | 1/8 HOSE, 1/8MP X 1/8MP X 180L | H2-180-2MP-2MP |
| 16 | 1 | 1/8 HOSE, 1/8MP X 1/8MP X 135L | H2-135-2MP-2MP |
| 100 | 10 | 3/8-16 X 1 CARRIAGE BOLT G5 ZC | BL-6-100-C |
| 101 | 8 | 3/8-16 X 1-1/4 CARRIAGE BOLT G5 ZC | BL-6-125-C |
| 102 | 16 | 3/8 SAE FW ZC | BL-6-SW |
| 103 | 16 | 3/8 SPLIT LW ZC | BL-6-LW |
| 104 | 16 | 3/8-16 HEX NUT ZC | BL-6-N |
| 105 | 8 | 1/2-13 X 2 HEX CAP G5 ZC | BL-8-200-H |
| 106 | 16 | 1/2 SAE FW ZC | BL-8-SW |
| 107 | 8 | 1/2-13 LN NYLON INSERT ZC | BL-8-LN |


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|------------------------------------|---------------|
| 1 | 1 | BEATER PANEL, LH | PR70373 |
| 2 | 1 | BEATER PANEL, RH | PR70374 |
| 3 | 1 | GEARBOX, 1000 rpm | VTB-1899-P2 |
| 4 | 1 | BEATER, LH | VTB-0053 |
| 5 | 1 | BEATER, RH | VTB-0054 |
| 6 | 1 | BEATER PAN | PR70259 |
| 7 | 2 | MOUNT, BEATER PAN | PR70278 |
| 8 | 1 | BEARING MOUNT, BEATER | PR70083 |
| 9 | 1 | COVER, BEATER BEARING | PR70096 |
| 10 | 26 | BALANCED BEATER KNIFE | VTB-1899-F3 |
| 11 | 8 | RIGHT BLADE | VTB-1899-B3 |
| 12 | 8 | BEATER BLADE, LH | VTB-1899-C3 |
| 13 | 2 | FLANGE BEARING HOUSING | BR-085-4PF |
| 14 | 2 | 1.75" BEARING | BR-175-085-I |
| 15 | 1 | 2" GREASE MANIFOLD | GF-2-2 |
| 16 | 2 | GREASE FITTING 1/8NPT | GF-1827 |
| 17 | 2 | 1/8 MP X 1/8 FPX 45° | A-1503-2-2 |
| 18 | 2 | 1/8 MP X 1/8 FPX | A-1404-2-2 |
| 19 | 2 | HINGE PIN | PR70133 |
| 20 | 4 | COTTER PIN, 3/16 X 1-1/2" | PIN-C3-24 |
| 21 | 1 | 1/8 HOSE 1/8MP X 1/8MP X 68 L | H2-58-2MP-2MP |
| 22 | 1 | 1/8 HOSE 1/8MP X 1/8MP X 100 L | H2-78-2MP-2MP |
| 23 | 1 | SHIM, BOTTOM PANEL, GEARBOX | PR50502 |
| 24 | 11 | GEAR LUBE, @QT | HP-1038 |
| 100 | 8 | 3/8-16 X 1-1/4 CARRIAGE BOLT G5 ZC | BL-6-125-C |
| 101 | 6 | 3/8 SAE FW ZC | BL-6-SW |
| 102 | 8 | 3/8 SPLIT LW ZC | BL-6-LW |
| 103 | 8 | 3/8-16 HEX NUT ZC | BL-6-N |
| 104 | 110 | 5/8-11 X 1-3/4 HHCS G5 ZC | BL-10-175-H |
| 105 | 28 | 5/8-11 X 2 HEX CAP G8 ZC | BL-10-200-H8 |
| 106 | 42 | 5/8 SAE FW ZC | BL-10-SW |
| 107 | 10 | 5/8 SPLIT LW ZC | BL-10-LW |
| 108 | 10 | 5/8-11 HEX FIN NUTS ZC | BL-10-N |
| 109 | 16 | 5/8-11 HEX LN NE ZC | BL-10-LN |
| 110 | 112 | 5/8-11 STOVER LN | BL-10-LNS |
| 111 | 2 | 3/4-10 X 1-3/4 HH G8 | BL-12-175-H-8 |
| 112 | 2 | 3/4 SAE FW | BL-12-SW |
| 113 | 2 | 3/4 LW | BL-12-LW |
| 114 | 2 | 3/4-10 NUT | BL-12-N |
| 115 | 8 | 7/16 SAE FW ZC | BL-7-SW |
| 116 | 8 | 7/16 SPLIT LW ZC | BL-7-LW |
| 117 | 8 | 7/16-14 X 1-3/4 HH G5 ZC | BL-7-175-HH |
| 44 | 1 | BRACKET, BEATER PAN LH | PR70343 |
| 45 | 1 | BRACKET, BEATER PAN, RH | PR70344 |

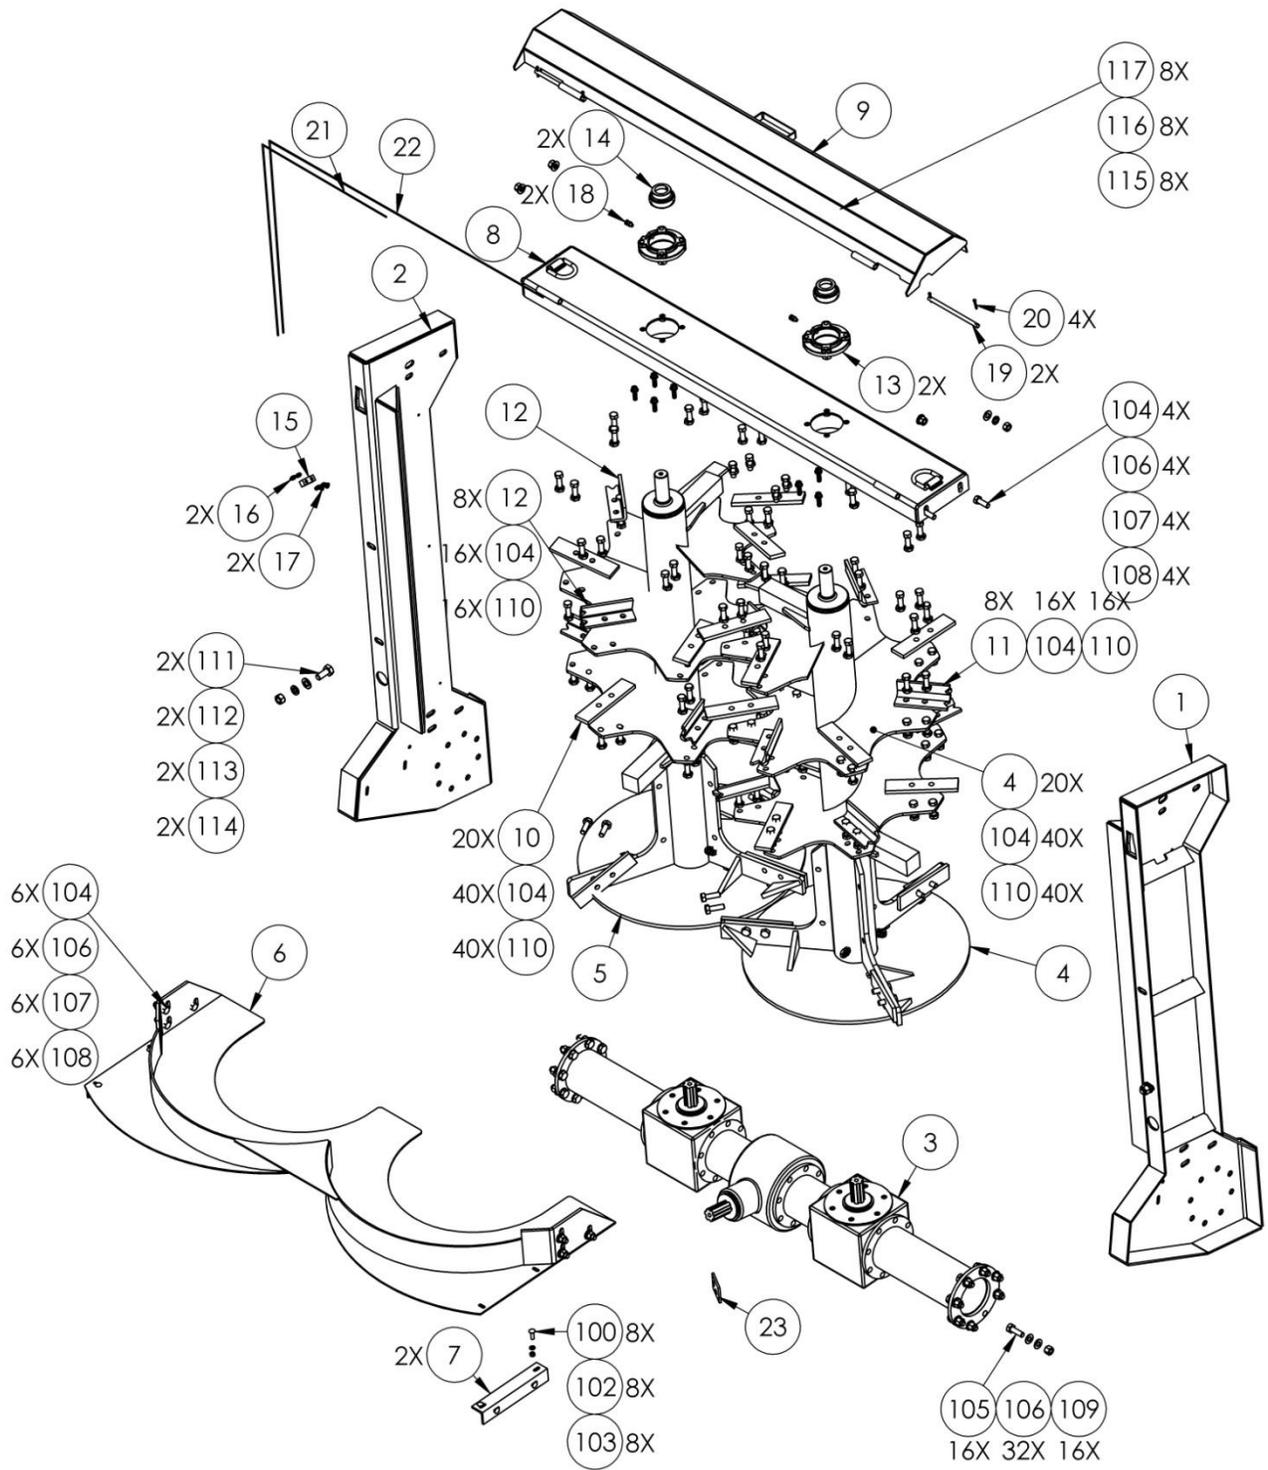

74418-2-03A Compost Beaters: Hydraulic Hoods/Trim Shield

| ITEM NO. | QTY. | DESCRIPTION | PART NUMBER |
|----------|------|---|----------------|
| 1 | 1 | PTO SHAFT, SIDE | VTB-CMP-2200-H |
| 2 | 1 | BOTTOM GEARBOX, 1840MM, 850MM SPINNER CENTERS | VTB-CMP-2200-D |
| 3 | 1 | GEARBOX, HORIZONTALS | VTB-CMP-2200-C |
| 4 | 2 | HORIZ. BEATER ASSY | VTB-CMP-2113 |
| 5 | 1 | SPINNER ASSY, RH | VTB-CMP-2110 |
| 6 | 1 | SPINNER ASSY, LH | VTB-CMP-2109 |
| 8 | 56 | KNIFE, HORIZ. COMP. BEATER | VTB-0047 |
| 19 | 1 | BEATER PANEL, RH | PR70372 |
| 20 | 1 | BEATER PANEL, LH | PR70371 |
| 9 | 1 | GEAR BOX SADDLE | PR70331 |
| 11 | 3 | LATCH PIN | PR63535 |
| 12 | 1 | BACKING BAR, BELTING | PR63534 |
| 13 | 1 | BELTING, MIDDLE | PR63533 |
| 14 | 1 | MOUNT, GEARBOX, LH | PR63532 |
| 15 | 1 | MOUNT, GEARBOX, RH | PR63531 |
| 16 | 1 | ADJUSTABLE PANEL | PR63528 |
| 17 | 1 | BACK PANEL, HYDRAULIC LIFT | PR63527 |
| 19 | 1 | TOP PLATE | PR63526 |
| 18 | 1 | SLURRY PAN | PR63525 |
| 21 | 3 | 5/8 CLEVIS PIN | PIN-10-28 |
| 22 | 3 | WELDED CYLINDER | HC-150-1004 |
| 23 | 2 | GREASE FITTING 1/8NPT | GF-1827 |
| 24 | 2 | 1.75" BEARING | BR-175-085-I |
| 25 | 2 | FLANGE BEARING HOUSING | BR-085-4PF |
| 100 | 6 | 1/2 SAE FW ZC | BL-8-SW |
| 101 | 6 | 1/2-13 HEX FIN NUTS ZC | BL-8-N |
| 102 | 6 | 1/2 SPLIT LW ZC | BL-8-LW |
| 103 | 6 | 1/2-13 X 1-1/2 CARRIAGE BOLT G5 ZC | BL-8-150-C |
| 104 | 15 | 3/8 SAE FW ZC | BL-6-SW |
| 105 | 11 | 3/8-16 HEX NUT ZC | BL-6-N |
| 106 | 11 | 3/8 SPLIT LW ZC | BL-6-LW |
| 107 | 11 | 3/8-16 X 1-1/4 CARRIAGE BOLT G5 ZC | BL-6-125-C |
| 108 | 4 | 3/4-10 NUT | BL-12-N |
| 109 | 4 | 3/4 LW | BL-12-LW |
| 110 | 4 | 3/4 FW | BL-12-FW |
| 111 | 4 | 3/4-10 x 1-3/4 HH G8 | BL-12-175-C |

74418-2-03A Compost Beaters: Hydraulic Hoods/Trim Shield

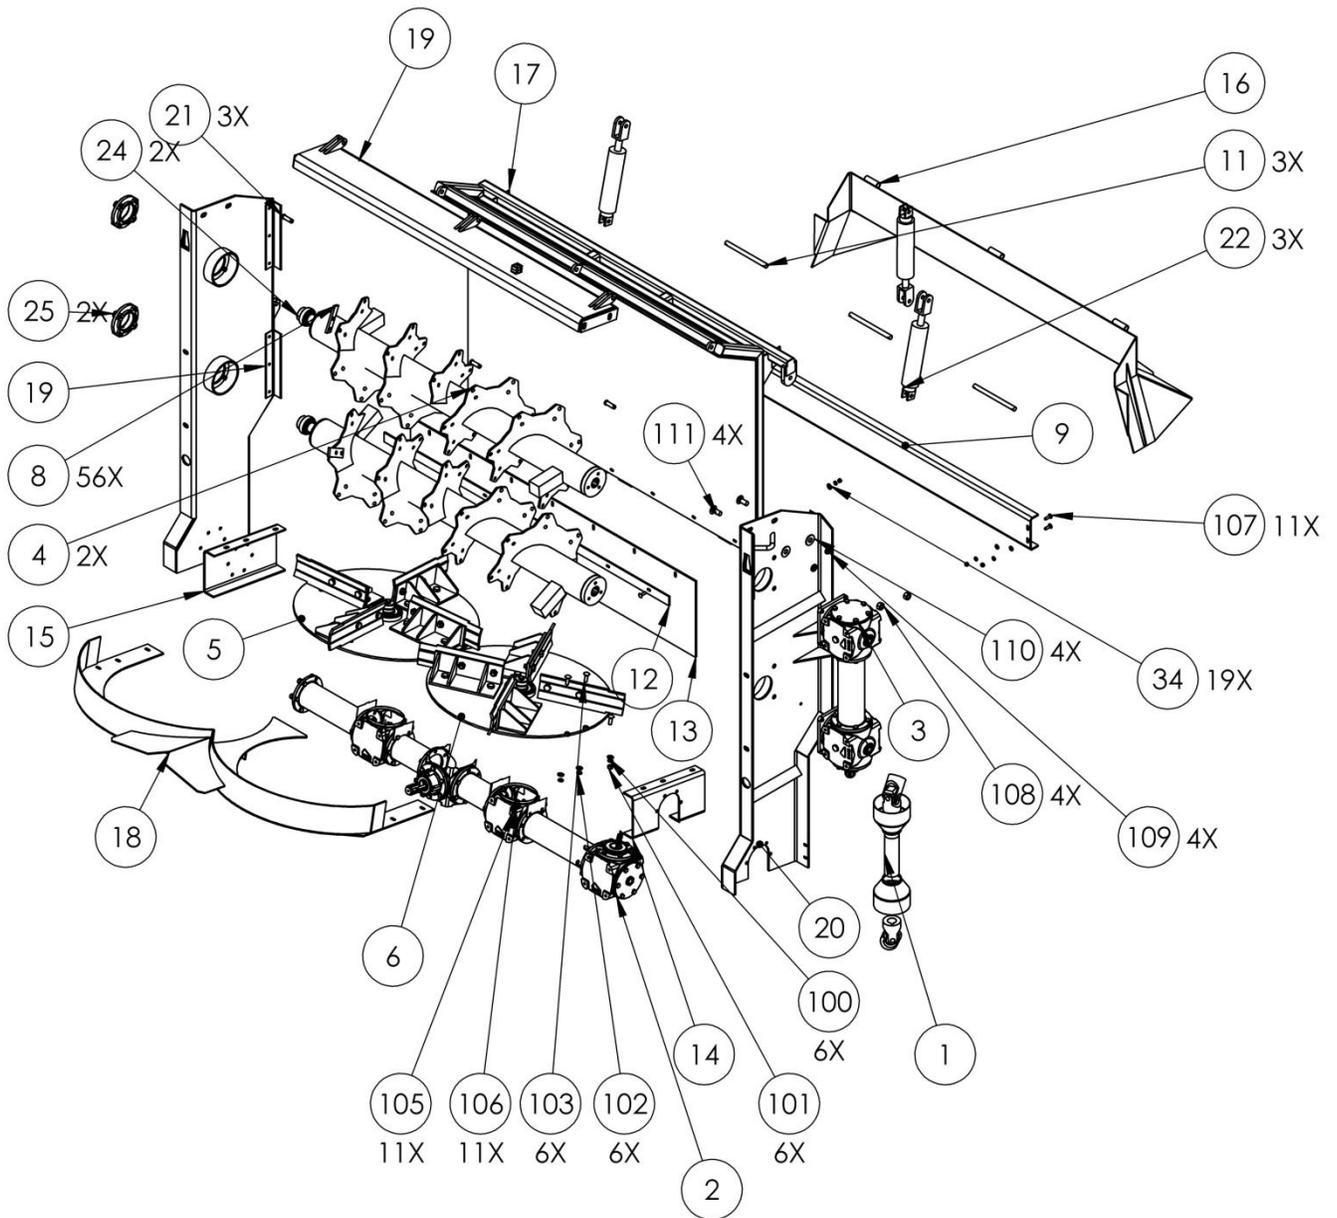


74418-2-03B Compost Beaters: Hydraulic Hood & Turnbuckle


| ITEM NO. | EXPLODED/QTY. | DESCRIPTION | PART NUMBER |
|----------|---------------|---|----------------|
| 1 | 1 | PTO SHAFT, SIDE | VTB-CMP-2200-H |
| 2 | 1 | BOTTOM GEARBOX, 1840MM, 850MM SPINNER CENTERS | VTB-CMP-2200-D |
| 3 | 1 | GEARBOX, HORIZONTALS | VTB-CMP-2200-C |
| 4 | 2 | HORIZ. BEATER ASSY | VTB-CMP-2113 |
| 5 | 1 | SPINNER ASSY, RH | VTB-CMP-2110 |
| 6 | 1 | SPINNER ASSY, LH | VTB-CMP-2109 |
| 8 | 56 | KNIFE, HORIZ. COMP. BEATER | VTB-0047 |
| 9 | 1 | BEATER PANEL, RH | PR70372 |
| 10 | 1 | BEATER PANEL, LH | PR70371 |
| 11 | 1 | Turnbuckle, 28.5" Ret Lgth, 3/4" -10 Thread | PR70335 |
| 12 | 1 | GEAR BOX SADDLE | PR70331 |
| 13 | 1 | ADJUSTABLE PANEL | PR63536 |
| 14 | 3 | LATCH PIN | PR63535 |
| 15 | 1 | BACKING BAR, BELTING | PR63534 |
| 16 | 1 | BELTING, MIDDLE | PR63533 |
| 17 | 1 | MOUNT, GEARBOX, LH | PR63532 |
| 18 | 1 | MOUNT, GEARBOX, RH | PR63531 |
| 19 | 1 | BACK PANEL, HYDRAULIC LIFT | PR63527 |
| 20 | 1 | TOP PLATE | PR63526 |
| 21 | 1 | SLURRY PAN | PR63525 |
| 22 | 3 | 5/8 CLEVIS PIN | PIN-10-28 |
| 23 | 2 | WELDED CYLINDER | HC-150-1004 |
| 24 | 2 | GREASE FITTING 1/8NPT | GF-1827 |
| 25 | 2 | 1.75" BEARING | BR-175-085-I |
| 26 | 2 | FLANGE BEARING HOUSING | BR-085-4PF |
| 100 | 6 | 1/2 SAE FW ZC | BL-8-SW |
| 101 | 6 | 1/2-13 HEX FIN NUTS ZC | BL-8-N |
| 102 | 6 | 1/2 SPLIT LW ZC | BL-8-LW |
| 103 | 6 | 1/2-13 X 1-1/2 CARRIAGE BOLT G5 ZC | BL-8-150-C |
| 104 | 15 | 3/8 SAE FW ZC | BL-6-SW |
| 105 | 11 | 3/8-16 HEX NUT ZC | BL-6-N |
| 106 | 11 | 3/8 SPLIT LW ZC | BL-6-LW |
| 107 | 11 | 3/8-16 X 1-1/4 CARRIAGE BOLT G5 ZC | BL-6-125-C |
| 108 | 4 | 3/4-10 NUT | BL-12-N |
| 109 | 4 | 3/4 LW | BL-12-LW |
| 110 | 4 | 3/4 FW | BL-12-FW |
| 111 | 4 | 3/4-10 x 1-3/4 HH G8 | BL-12-175-C |

74418-2-03B

Compost Beaters: Hydraulic Hood & Turnbuckle

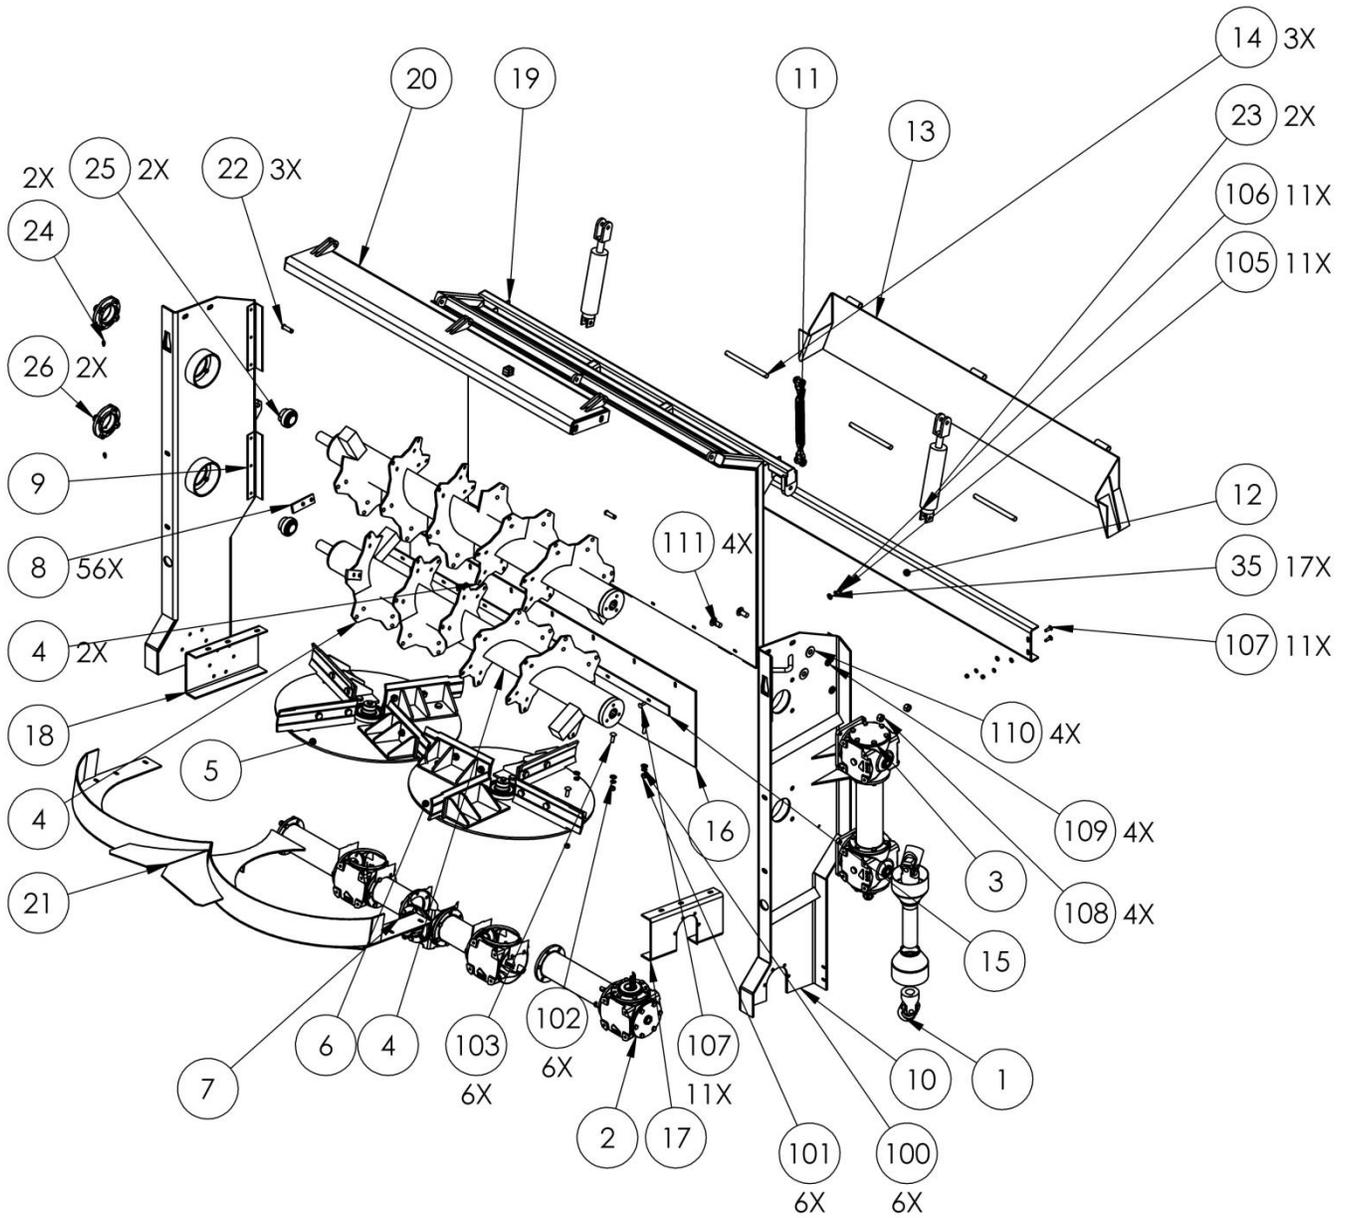


| ITEM NO. | EXPLODED/QTY. | DESCRIPTION | PART NUMBER |
|----------|---------------|--|----------------|
| 1 | 1 | PTO SHAFT, SIDE | VTB-CMP-2200-H |
| 2 | 1 | BOTTOM GEARBOX, 1840MM, 850MM SPINNER CENTERS | VTB-CMP-2200-D |
| 3 | 1 | GEARBOX, HORIZONTALS | VTB-CMP-2200-C |
| 4 | 2 | HORIZ. BEATER ASSY | VTB-CMP-2113 |
| 5 | 1 | SPINNER ASSY, RH | VTB-CMP-2110 |
| 6 | 1 | SPINNER ASSY, LH | VTB-CMP-2109 |
| 8 | 56 | KNIFE, HORIZ. COMP. BEATER | VTB-0047 |
| 9 | 1 | BEATER PANEL, RH | PR70372 |
| 10 | 1 | BEATER PANEL, LH | PR70371 |
| 11 | 1 | GEAR BOX SADDLE | PR70331 |
| 12 | 1 | BACKING BAR, BELTING | PR63534 |
| 13 | 1 | BELTING, MIDDLE | PR63533 |
| 14 | 1 | MOUNT, GEARBOX, LH | PR63532 |
| 15 | 1 | MOUNT, GEARBOX, RH | PR63531 |
| 16 | 1 | BACK PANEL, HYDRAULIC LIFT | PR63527 |
| 17 | 1 | TOP PLATE | PR63526 |
| 18 | 1 | SLURRY PAN | PR63525 |
| 19 | 3 | 5/8 CLEVIS PIN | PIN-10-28 |
| 20 | 2 | WELDED CYLINDER | HC-150-1004 |
| 21 | 2 | GREASE FITTING 1/8NPT | GF-1827 |
| 22 | 2 | 1.75" BEARING | BR-175-085-I |
| 23 | 2 | FLANGE BEARING HOUSING | BR-085-4PF |
| 100 | 6 | 1/2 SAE FW ZC | BL-8-SW |
| 101 | 6 | 1/2-13 HEX FIN NUTS ZC | BL-8-N |
| 102 | 6 | 1/2 SPLIT LW ZC | BL-8-LW |
| 103 | 6 | 1/2-13 X 1-1/2 CARRIAGE BOLT G5 ZC | BL-8-150-C |
| 104 | 15 | 3/8 SAE FW ZC | BL-6-SW |
| 105 | 11 | 3/8-16 HEX NUT ZC | BL-6-N |
| 106 | 11 | 3/8 SPLIT LW ZC | BL-6-LW |
| 107 | 11 | 3/8-16 X 1-1/4 CARRIAGE BOLT G5 ZC | BL-6-125-C |
| 108 | 4 | 3/4-10 NUT | BL-12-N |
| 109 | 4 | 3/4 LW | BL-12-LW |
| 110 | 4 | 3/4 FW | BL-12-FW |
| 111 | 4 | 3/4-10 x 1-3/4 HH G8 | BL-12-175-H-8 |

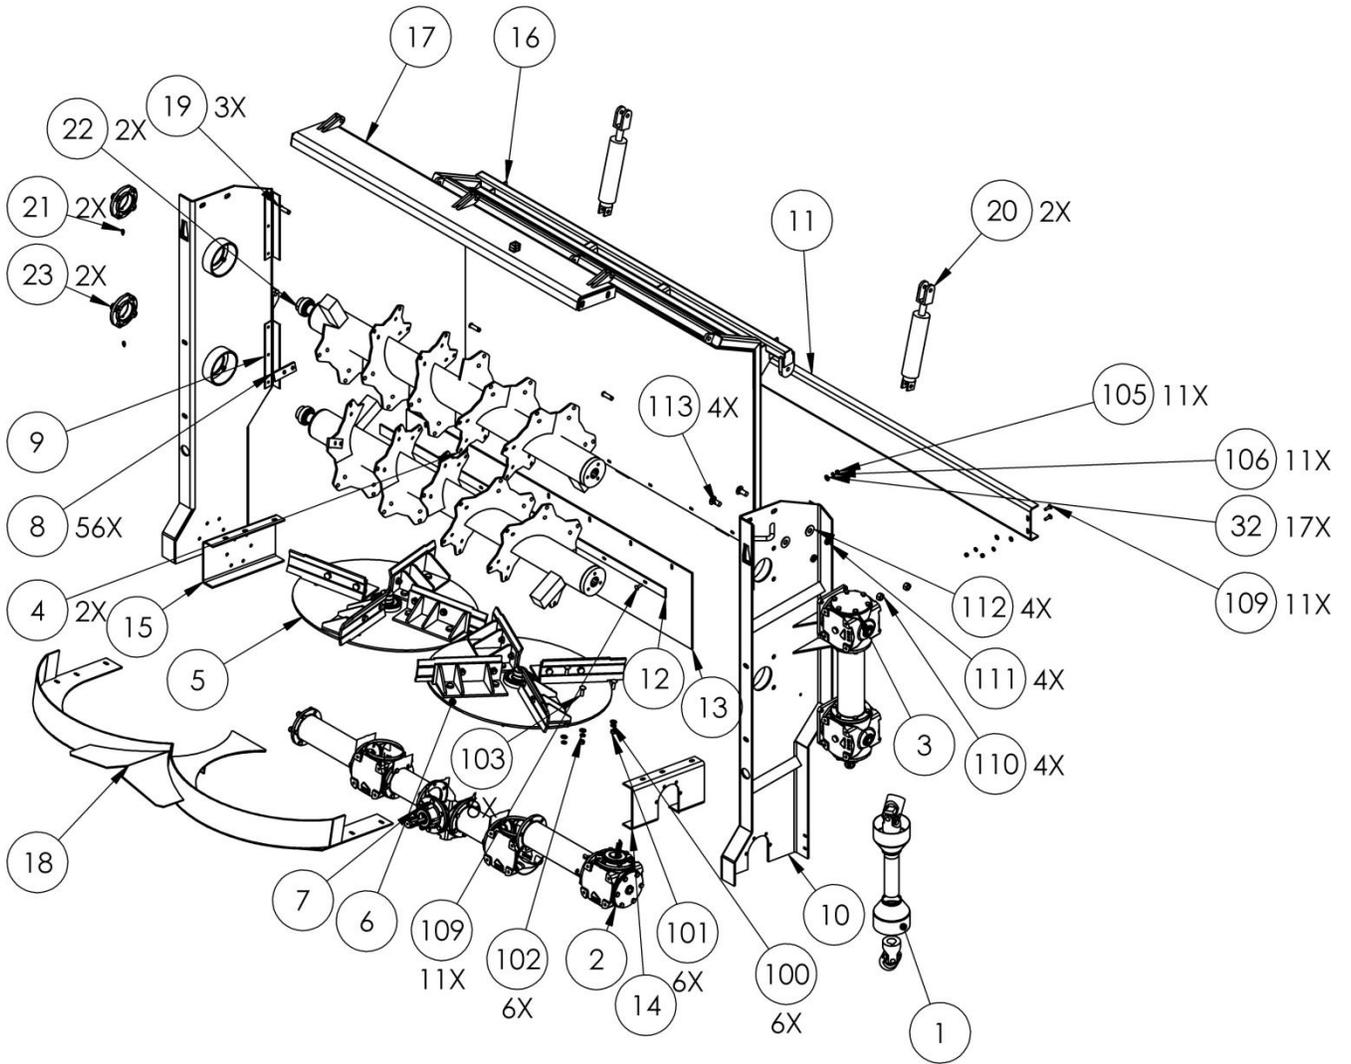




| ITEM NO. | EXPLODED/QTY. | DESCRIPTION | PART NUMBER |
|----------|---------------|---|-------------------|
| 1 | 1 | 1 GALLON RESERVOIR, NVE STYLE | VPA-NVE-36001 |
| 2 | 2 | 1/4 X 1/4 X 1/4 HOSE BARB WYE | AYN-4-4-4 |
| 3 | 1 | 1/4 X 1/4 X 1/4 STAINLESS TEE | AT-4-4-4-SS |
| 4 | 3 | 1/4 NPT CLOSE NIPPLE, SS | AN-4-CL-SS |
| 5 | 2 | 1/4 MALE PIPE X 1/4 PUSH LOC | A-4124-4-4 |
| 6 | 2 | 1/4 BRASS BALL VALVE | VLV-025-B |
| 7 | 2 | SPRING, CHAIN TENSIONER | SPRG-1200-EH |
| 8 | 2 | SPREADER CHAIN ROLLER | RLR-0030 |
| 9 | 2 | TENSION BOLT | PR70319 |
| 10 | 1 | CHAIN OIL SYSTEM BRACKET | PR70316 |
| 11 | 1 | CHAIN OIL SYSTEM MOUNT | PR70315 |
| 12 | 2 | MACHINED NUT | PR70313 |
| 13 | 2 | HOUSING, TAKEUP BEARING | PR70309 |
| 14 | 1 | CHAIN SHAFT, FRONT | PR70288 |
| 15 | 1 | REAR DRIVE SHAFT | PR70276 |
| 16 | 30 | CHAIN FLIGHTING, CENTER TAB | PR60425 |
| 17 | 2 | DRIVE SPROCKET, PINTLE CHAIN | PR60424 |
| 18 | 1 | PULL CHAIN | PR60423 |
| 19 | 1 | MOUNT, TORQUE PLATE | PR60068 |
| 20 | 1 | TORQUE PLATE | PR60066 |
| 21 | 2 | 1/4 X 2-1/4 ROLL PIN | PIN-4-36 |
| 22 | 1 | 1/2" KEY X 5.375" | KEY-8-8-86-HCS |
| 23 | 2 | 5/8" KEY X 5.5" | KEY-10-10-550-HCS |
| 24 | 2 | 5/8" KEY X 3" | KEY-10-10-300-HCS |
| 25 | 6 | HYDRAULIC HOSE HOLDER 3/8 | HA-1031 |
| 26 | 1 | PUSH LOC HOSE 1/4 @ FT. | H4-PL |
| 27 | 2 | BEARING, TAKEUP, 5/8 KEYWAY, 2.00 SHAFT | BRG-32-TU |
| 28 | 2 | BEARING ASSEMBLY, 2.5" | BR-250-HD |
| 100 | 95 | 1/2 SAE FW ZC | BL-8-SW |
| 102 | 8 | 1/2 SPLIT LW ZC | BL-8-LW |
| 103 | 4 | 1/2-13 X 3 HH C/S G5 ZC | BL-8-300-H |
| 104 | 14 | 1/2-13 X 1-1/4 HHCS G5 ZC | BL-8-125-H |
| 105 | 74 | 1/2-13 STOVER LN | BL-8-LNS |
| 106 | 62 | 3/8-16 X 1 HHCS BOLT G5 ZC | BL-8-150-H |
| 107 | 8 | 5/16-18 UNC HEX NUT A563 GRA ZINC | BL-5-N |
| 108 | 16 | 5/16 USS FW ZC | BL-5-FW |
| 109 | 8 | 5/16 UNC X 1 HH C/S BOLT GR5 ZINC | BL-5-100-H |
| 110 | 2 | 1/4-20 HEX FIN NUT ZC | BL-4-N |
| 111 | 2 | 1/4 USS FW ZC | BL-4-FW |
| 112 | 1 | 1/4 U BOLT 1-1/8 WIDE 2 LONG | BL-4-200-U |
| 113 | 2 | 1/4 UNC X 3/4 CARRIAGE BOLT G5 ZC | BL-4-075-C |
| 114 | 2 | 1-8 JAM NUT HEX FIN A563 GA ZC | BL-16-JN |

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|--------------------------|--------------|
| 1 | 1 | GEARBOX | GBX-1893 |
| 2 | 0 | FLANGE GASKET | PR60026 |
| 3 | 1 | ORBIT MOTOR | HM-1893 |
| 4 | 3 | GEAR LUBE, 80W90 | HP-1038 |
| 100 | 12 | 14MM X 40MM, BOLT | BL-M-14-40-H |
| 101 | 12 | 5/8 SPLIT LW ZC | BL-10-LW |
| 801 | 1 | HOUSING | GBX-1893-D |
| 802 | 1 | GEARBOX HUB | GBX-1893-B |
| 803 | 1 | INTERNAL RETAINING CLIP | GBX-1893-C |
| 804 | 1 | GEAR Z=54 | GBX-1893-E |
| 805 | 2 | BALL BEARING, OPEN | GBX-1893-A |
| 806 | 2 | INTERNAL CLIP | GBX-1893-F |
| 807 | 1 | PINION Z=12 | GBX-1893-G |
| 808 | 2 | KEY 12 X 8 X 30 | GBX-1893-H |
| 809 | 1 | GEAR Z=63 | GBX-1893-I |
| 810 | 2 | BEARING 6208 | GBX-1893-J |
| 811 | 3 | CIRCLIP I 80 | GBX-1893-K |
| 812 | 1 | PINION Z=10 | GBX-1893-L |
| 813 | 1 | KEY 8 X 7 X 25 | GBX-1893-M |
| 814 | 1 | GEAR Z=43 | GBX-1893-N |
| 815 | 1 | SPACER | GBX-1893-O |
| 816 | 2 | BEARING 6305 | GBX-1893-P |
| 817 | 2 | CIRCLIP I 62 | GBX-1893-Q |
| 818 | 1 | PINION Z=28 | GBX-1893-R |
| 819 | 1 | BEARING | GBX-1893-S |
| 820 | 1 | CIRCLIP E 50 | GBX-1893-T |
| 821 | 2 | OIL PLUG 1" GAS. | GBX-1893-U |
| 822 | 2 | OIL LEVEL INDIC. 1" GAS. | GBX-1893-V |
| 823 | 2 | PLUG | GBX-1893-W |
| 824 | 2 | PLUG | GBX-1893-X |
| 825 | 2 | SHAFT SEAL, GEARBOX | GBX-1893-Y |
| 826 | 1 | GASKET | GBX-1893-Z |
| 827 | 1 | COVER | GBX-1893-A1 |
| 828 | 8 | SCREW, HEX-HD M 8 X 16 | GBX-1893-B1 |

NOTE:
MANY OF THESE PARTS
ARE SPECIAL
ORDER ONLY.
CONSULT YOUR DEALER
FOR AVAILABILITY

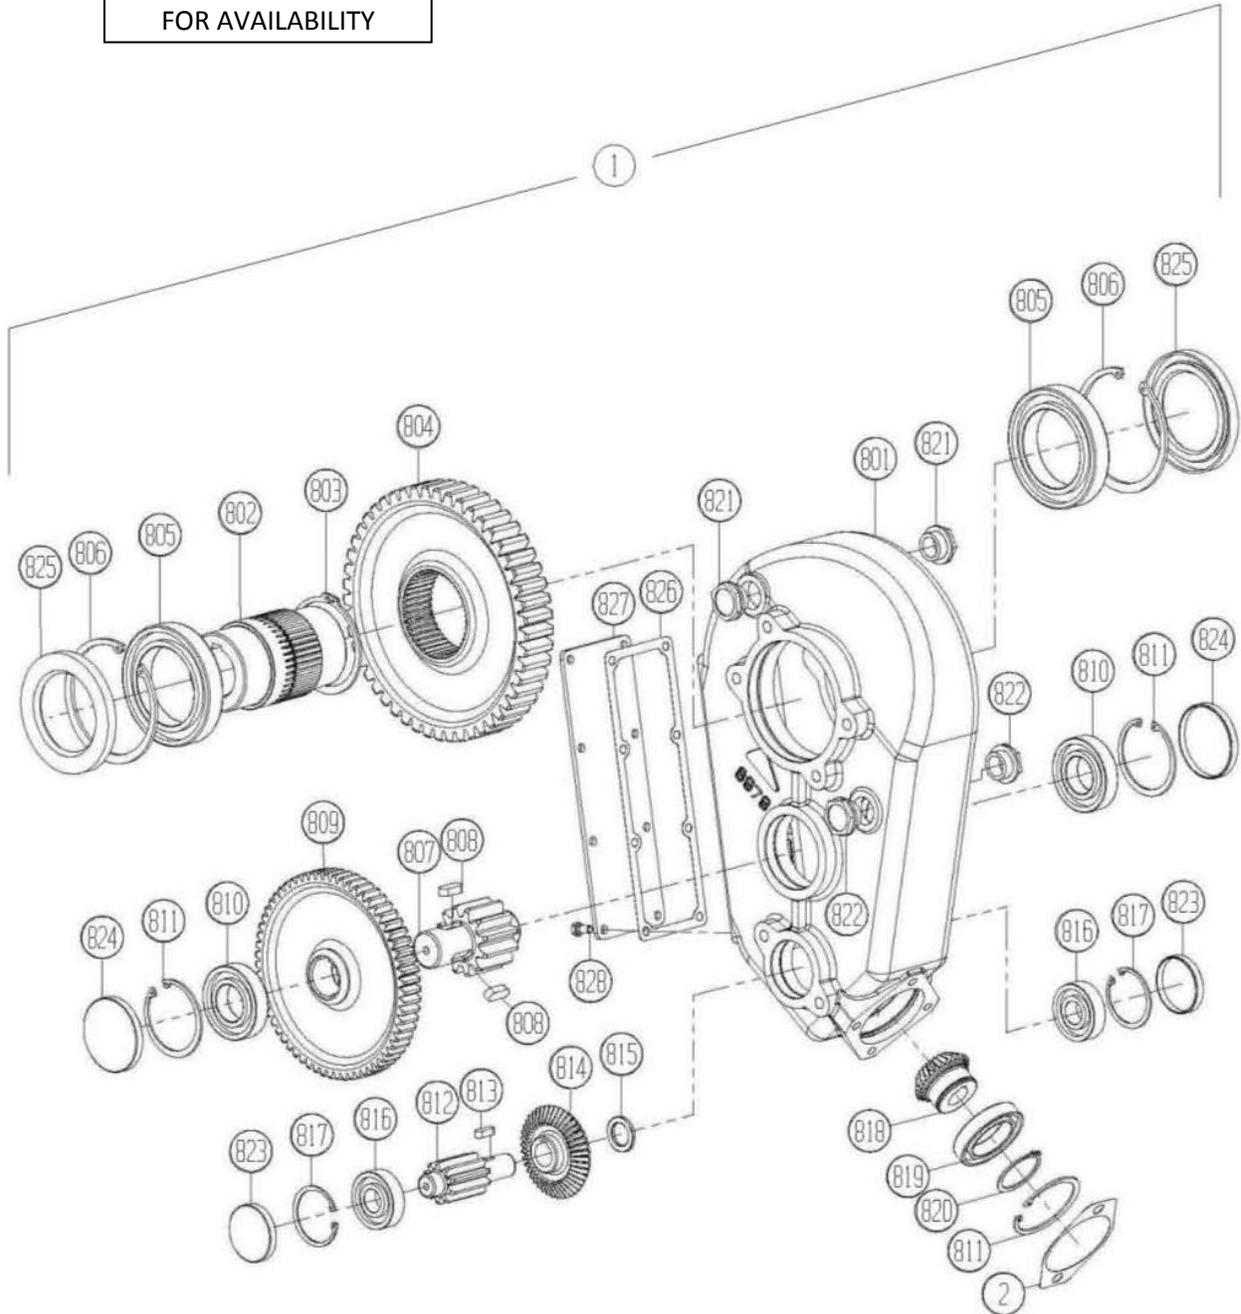

NOTE:
MANY OF THESE PARTS ARE SPECIAL
ORDER ONLY. CONSULT YOUR DEALER
FOR AVAILABILITY

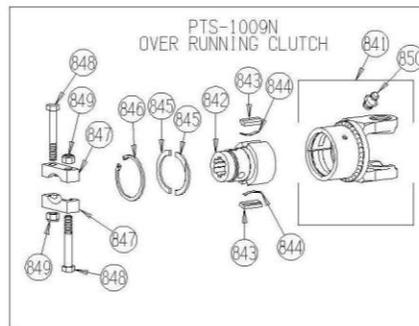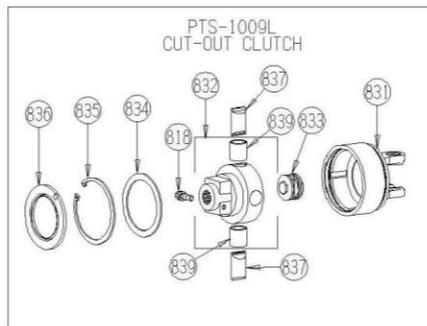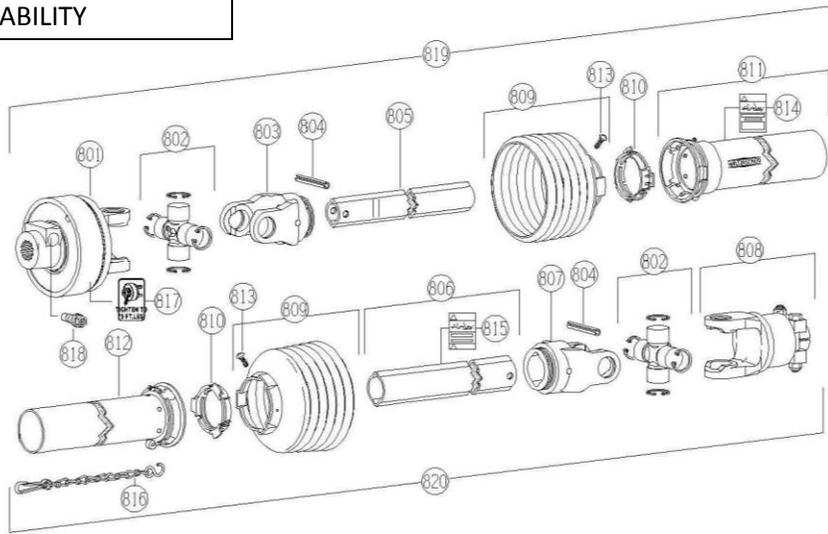


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|-------------------------------|-------------|
| 1 | 1 | DRIVELINE FOR VERTICALS, REAR | PTS-1023 |
| 801 | 1 | CUT-OUT CLUTCH | PTS-1009L |
| 802 | 2 | CROSS & BEARING KIT | PTS-1010B |
| 803 | 1 | INBOARD YOKE, 1b | PTS-1009B |
| 804 | 2 | SPRING PIN | PTS-1010C |
| 805 | 1 | INNER PROFILE | PTB-1023A |
| 806 | 1 | OUTER PROFILE | PTS-1023B |
| 807 | 1 | INBOARD YOKE | PTS-1010D |
| 808 | 1 | OVER RUNNING CLUTCH | PTS-1009N |
| 809 | 2 | SHIELD CONE 6 RIB | PTB-1014I |
| 810 | 2 | PTO SHIELD BEARING RING | PTS-1002J |
| 811 | 1 | GUARD TUBE OUTER | PTS-1023C |
| 812 | 1 | GUARD TUBE INNER | PTS-1023D |
| 813 | 2 | SCREW | PTS-1010K |
| 814 | 1 | DECAL, OUTER | PTS-1010L |
| 815 | 1 | DECAL, INNER | PTS-1010M |
| 816 | 1 | PTO SHIELD SAFETY CHAIN | PTS-1002K |
| 817 | 1 | DECAL | PTS-1009J |
| 818 | 1 | CC LOCK ASSEMBLY | PTS-1009K |


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|-------------------------------|-------------|
| 819 | 1 | FRONT, HALF SHAFT | PTS-1023-FH |
| 820 | 1 | REAR, HALF SHAFT | PTS-1023-RH |
| 831 | 1 | HOUSING | PTS-1009E-B |
| 832 | 1 | HUB 1-3/4"-20 SPL CC | PTS-1009E-C |
| 833 | 1 | SPRING PACK | PTS-1009E-D |
| 834 | 1 | WASHER | PTS-1009E-E |
| 835 | 1 | RETAINING RING | PTS-1009E-F |
| 836 | 1 | SEALING RING | PTS-1009E-G |
| 838 | 2 | CAM | PTS-1009E-A |
| 839 | 2 | BUSHING - IN PART PTS-1009E-C | PTS-1009E-H |
| 841 | 1 | CLUTCH HOUSING | PTS-1020A-A |
| 842 | 1 | HUB | PTS-1009N-A |
| 843 | 2 | KEY | PTS-1010F-A |
| 844 | 2 | LEAF SPRING | PTS-1010F-B |
| 845 | 1 | SUPPORTING RING | PTS-1009N-B |
| 846 | 1 | RETAINING RING | PTS-1010F-G |
| 847 | 2 | CLAMP BRIDGE | PTS-1009N-C |
| 848 | 2 | HEX BOLT - M16 X 110L | PTS-1009N-D |
| 849 | 2 | LOCKNUT - M16 | PTS-1009N-E |
| 850 | 1 | ZERK, DOUBLE YOKE | PTS-1008C |

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|----------------------------------|-------------|
| 1 | 1 | GEARBOX, 1000 rpm | VTB-1899-P2 |
| 801 | 1 | CAP, SIDE, CENTRAL GEARBOX | VTB-0038-27 |
| 802 | 2 | CAP, SIDE | VTB-0038-20 |
| 803 | 1 | LONG AXIS | VTB-0038-29 |
| 804 | 3 | LOCKNUT | VTB-0038-21 |
| 805 | 3 | LOCKWASHER | VTB-0038-22 |
| 806 | 2 | PINION, 13T | VTB-0038-23 |
| 807 | 4 | BEARING, TAPERED | VTB-0038-13 |
| 808 | 1 | BALL BEARING | VTB-0038-25 |
| 809 | 1 | GEAR, 24T | VTB-0038-26 |
| 810 | 1 | EXTERNAL RETAINING RING | VTB-0038-34 |
| 812 | 2 | SLEEVE, OUTPUT | VTB-0038-07 |
| 813 | 2 | O-RING | VTB-0038-33 |
| 814 | 12 | SCREW, HEX CAP, M14X30, GR 8.8 | VTB-0038-05 |
| 815 | 2 | INSPECTION COVER | VTB-0038-10 |
| 816 | 2 | OUTPUT GASKET, 210mmX150mmX0.3mm | VTB-0038-04 |
| 817 | 2 | OIL SEAL, OUTPUT | VTB-0038-06 |
| 818 | 2 | BALL BEARING | VTB-0038-09 |
| 819 | 2 | SHAFT, OUTPUT | VTB-0038-08 |


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|----------------------------------|-------------|
| 820 | 2 | SPACER, OUTPUT | VTB-0038-18 |
| 821 | 2 | GEAR, 22T, 1:2.38 | VTB-0038-17 |
| 822 | 2 | BEARING, TAPERED | VTB-0038-19 |
| 823 | 2 | SIDE TUBE ASSY | VTB-0038-01 |
| 824 | 48 | SCREW, HEX CAP, M14X35, GR 8.8 | VTB-0038-02 |
| 825 | 6 | SIDE GASKET, 230mmX160mmX0.3mm | VTB-0038-03 |
| 826 | 1 | MID CONNECTING TUBE SUB-ASSEMBLY | VTB-0038-28 |
| 827 | 1 | OIL SIGHT GAUGE, M33-2.5X18 | VTB-008-31 |
| 828 | 1 | DRAIN PLUG, M20-1.5X15 | VTB-0038-32 |
| 829 | 1 | FILLER PLUG, M33-2.5X18 | VTB-0038-30 |
| 830 | 1 | CONNECTING TUBE SUB-ASSEMBLY | VTB-0038-24 |
| 831 | 1 | PINION, 17T, 1:2.38 | VTB-0038-16 |
| 832 | 1 | GASKET, INPUT | VTB-0038-11 |
| 833 | 1 | CAP, INPUT | VTB-0038-12 |
| 834 | 1 | OIL SEAL, INPUT | VTB-0038-15 |
| 835 | 1 | SHAFT, INPUT, 1.75-6A SPLINE | VTB-0038-14 |

NOTE:
MANY OF THESE PARTS ARE SPECIAL ORDER ONLY. CONSULT YOUR DEALER FOR AVAILABILITY

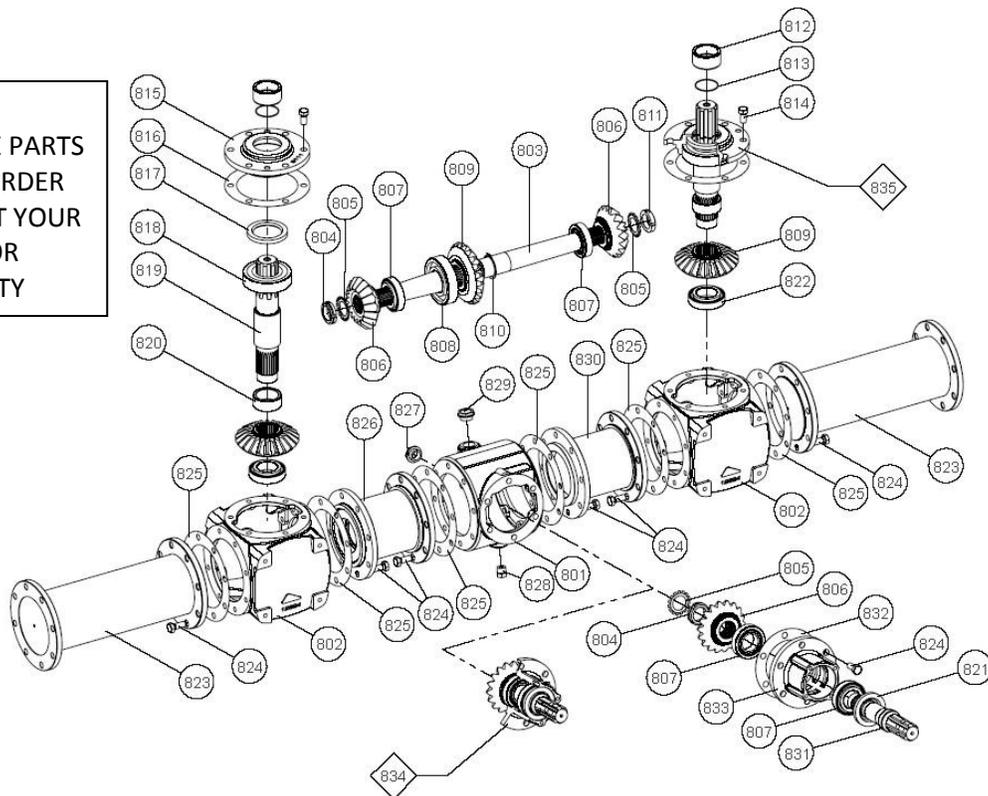


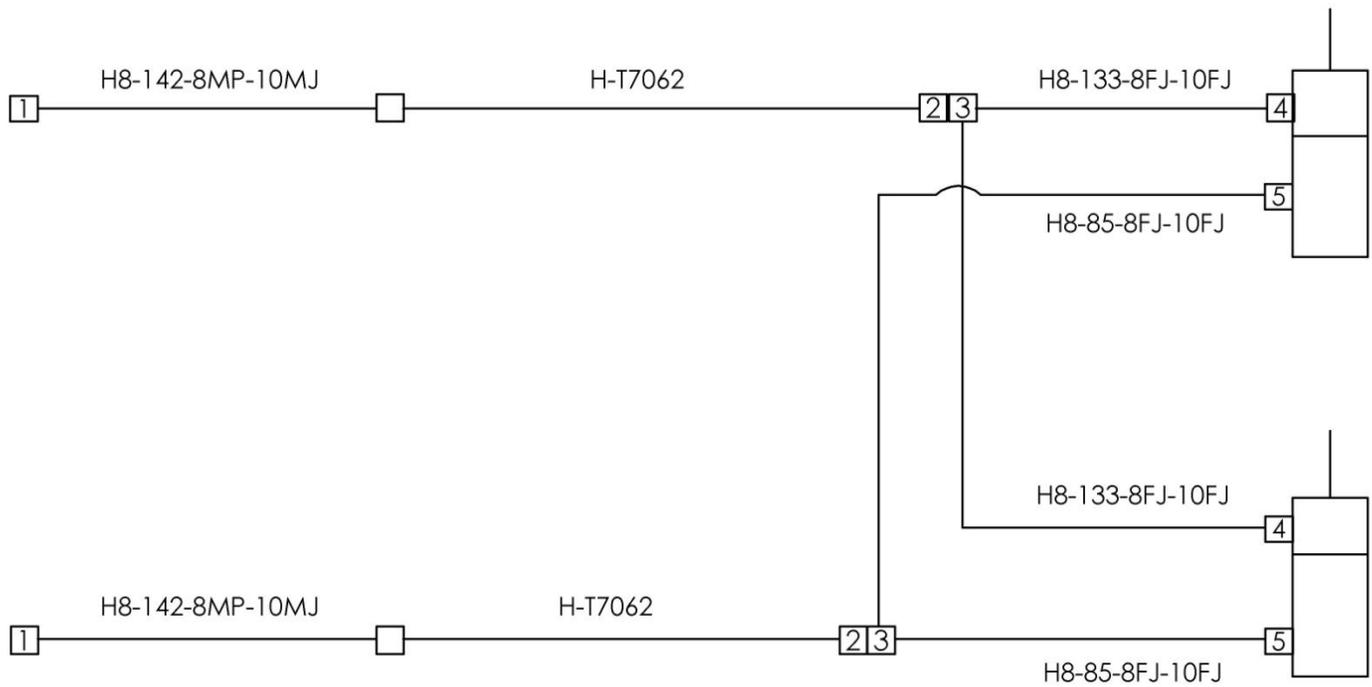


| ITEM NO. | QTY | DESCRIPTION | PART # |
|----------|-----|---|-----------------|
| 1 | 2 | TRACTOR QUICK COUPLER, MALE, 1/2" W/FPT | A-QD2010-8-8 |
| 2 | 2 | ELBOW, 45, 5/8 MJ X 5/8 FJ | A-6502-10 |
| 3 | 2 | TEE, 5/8 MJ X 5/8 MJ X 5/8 MJ | A-2603-10 |
| 4 | 2 | ELBOW, 45, 1/2 FJ X 6 SAE | A-6801-08-06-L |
| 5 | 2 | ELBOW, 1/2 FJ X 6 SAE | A-6801-08-06 |
| 6 | 2 | 1/2" HOSE 1/2 MP X 5/8 MJ X 142" | H8-142-8MP-10MJ |
| 7 | 2 | 5/8" HYDRAULIC TUBE, SS | H-T7062 |
| 8 | 2 | 1/2" HOSE 1/2 FJ X 5/8 FJ X 133" | H8-133-8FJ-10FJ |
| 9 | 2 | 1/2" HOSE 1/2 FJ X 5/8 FJ X 85" | H8-85-8FJ-10FJ |
| 10 | 8 | HYDRA-ZORB TUBE CLAMP 5/8" | HA-1062-H |

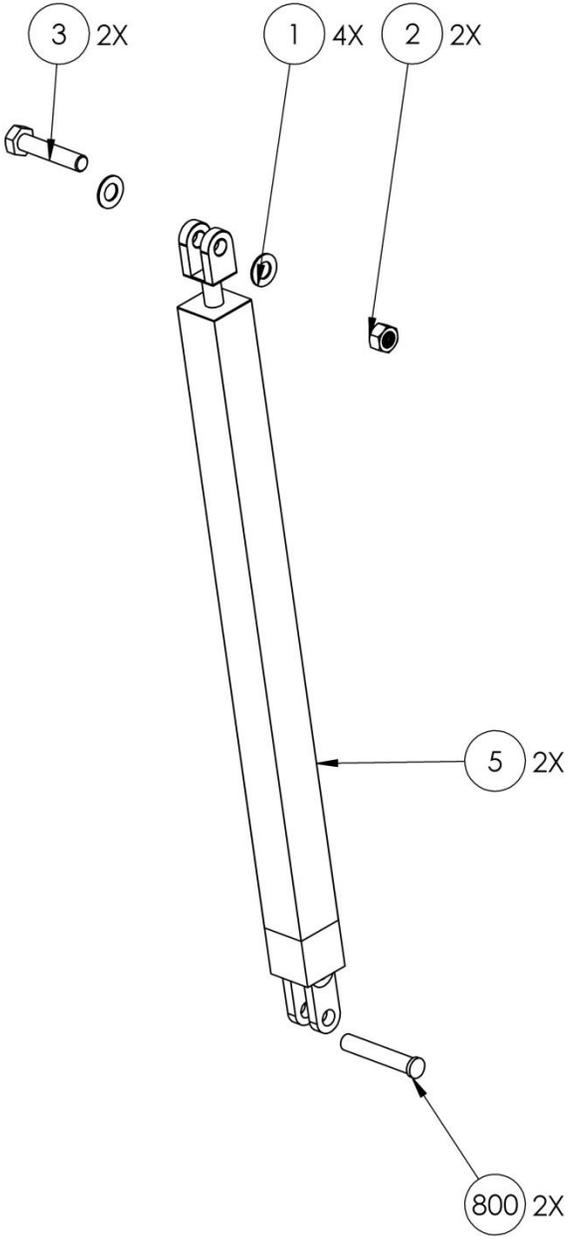

| ITEM NO. | Default/QTY. | DESCRIPTION | PART NUMBER |
|----------|--------------|--|---------------|
| 1 | 4 | 1 SAE FW | BL-16-SW |
| 2 | 2 | 1 H LN ZC G8 | BL-16-LN-8 |
| 3 | 2 | 1 X 5 HH G8 | BL-16-500-H8 |
| 800 | 2 | 1 X 3-1/2 CYLINDER PIN | HC-250-6006-A |
| 5 | 2 | HYDRAULIC CYLINDER, 2.5" BORE X 42" STROKE | HC-250-4206 |

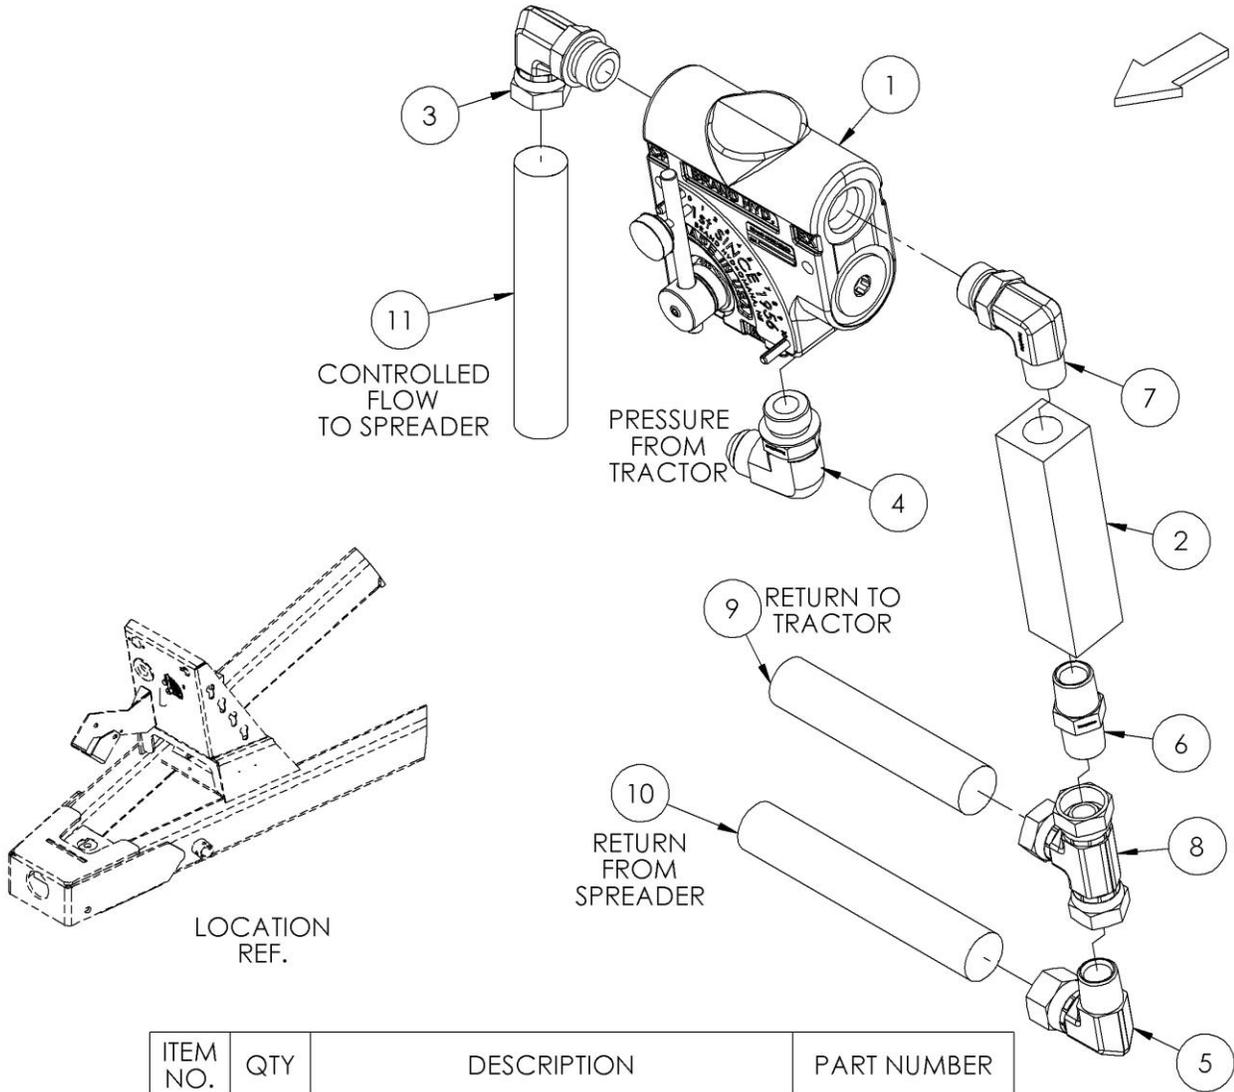


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|-----------------------------------|----------------|
| 1 | 1 | FLOW CONTROL | HV-FC5510 |
| 2 | 1 | 1/2" PARKER CHECK VALVE | HV-CKV-800S |
| 3 | 1 | 10 SAE X 1/2 FPX90°, FORGED | A-6901-10-8 |
| 4 | 1 | ELBOW, 5/8" MJ X 10 SAE | A-6801-10 |
| 5 | 1 | ELBOW 1/2 MP X 5/8 FJX | A-6501-10-08 |
| 6 | 1 | HEX NIPPLE 1/2" X 1/2" | A-5404-8-8 |
| 7 | 1 | 10 SAE X 1/2" MP 90° | A-6806-10-8 |
| 8 | 1 | SWIVEL T 1/2" NPTF | A-1603-8-8-8 |
| 9 | 1 | 1/2" HOSE 1/2MP X 5/8MJIC X 27" L | H8-27-8MP-10MJ |
| 10 | 1 | 1/2" HOSE X 1/2MP X 1/2MP X 94" L | H8-94-8MP-8MP |
| 11 | 1 | 1/2" HOSE 1/2MP X 5/8FJ X 16" L | H8-16-8MP-10FJ |
| 102 | 2 | 1/4-20 HEX LN NE ZC | BL-4-LN |
| 103 | 4 | 1/4 USS FW ZC | BL-4-FW |
| 104 | 2 | 1/4-20 X 3 HEX CAP G5 ZC | BL-4-300-H |

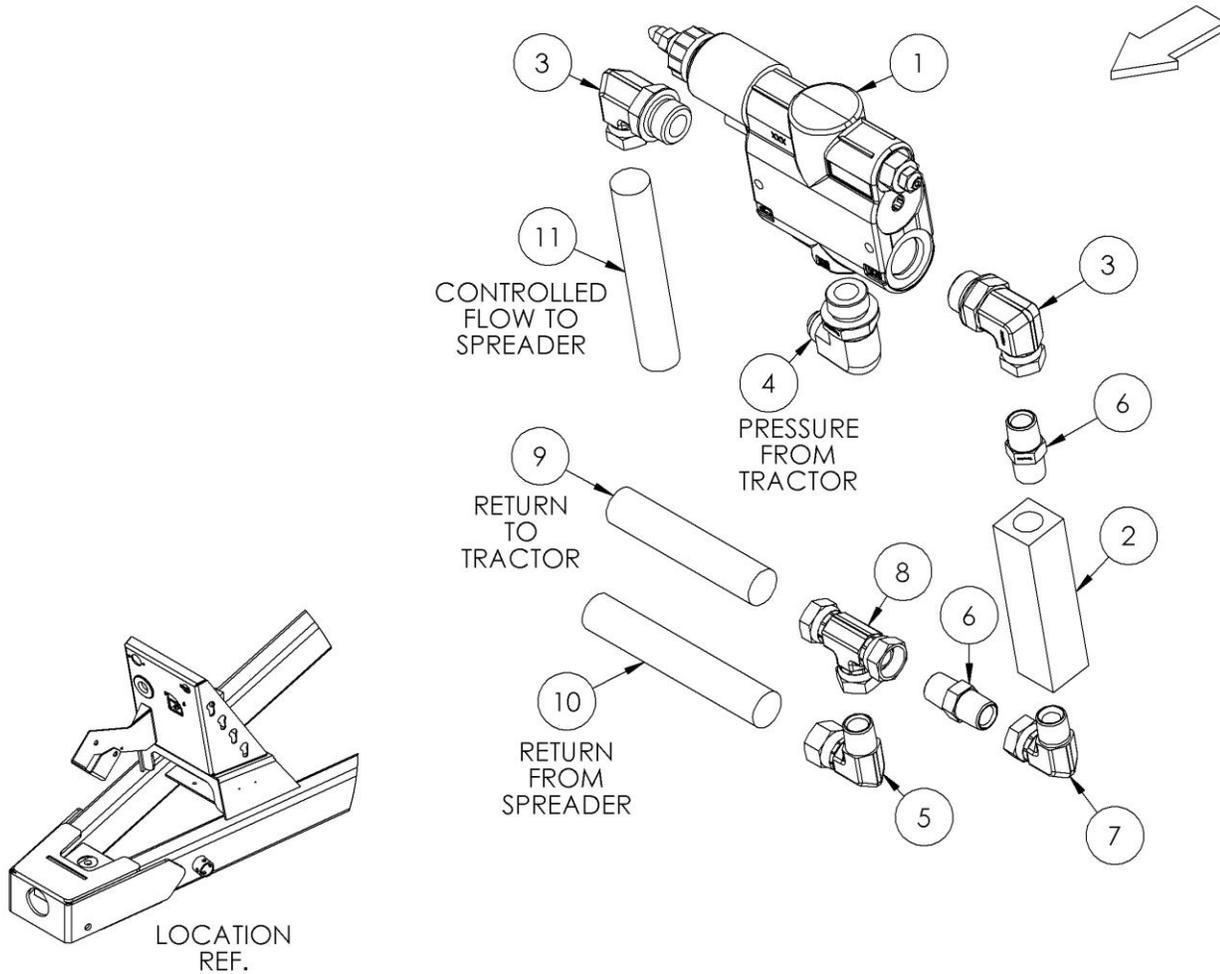


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|-----------------------------------|----------------|
| 1 | 1 | ELECT. FLOW CONTROL | HVE-C122012 |
| 2 | 1 | 1/2" PARKER CHECK VALVE | HV-CKV-800S |
| 3 | 2 | ELBOW 12 SAE X 1/2" FPX | A-6901-12-8 |
| 4 | 1 | ELBOW, 10 MJ X 12 SAE | A-6801-10-12 |
| 5 | 1 | ELBOW 1/2 MP X 5/8 FJX | A-6501-10-08 |
| 6 | 2 | HEX NIPPLE 1/2" X 1/2" | A-5404-8-8 |
| 7 | 1 | 1/2 MP X 1/2 FPX90° | A-1501-8-8 |
| 8 | 1 | SWIVEL T 1/2" NPTF | A-1603-8-8-8 |
| 9 | 1 | 1/2" HOSE 1/2MP X 5/8MJIC X 27" L | H8-27-8MP-10MJ |
| 10 | 1 | 1/2" HOSE X 1/2MP X 1/2MP X 94" L | H8-94-8MP-8MP |
| 11 | 1 | 1/2" HOSE 1/2MP X 5/8FJ X 16" L | H8-16-8MP-10FJ |
| 102 | 2 | 1/4-20 HEX LN NE ZC | BL-4-LN |
| 103 | 4 | 1/4 USS FW ZC | BL-4-FW |
| 104 | 2 | 1/4-20 X 3 HEX CAP G5 ZC | BL-4-300-H |
| 201 | 40 | 14 GAUGE WIRE (BLUE) | ELC-14-BL |


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|-----------------------------------|-------------|
| 202 | 20 | 14 GAUGE WIRE (RED) | ELC-14-R |
| 203 | 20 | 14 GAUGE WIRE (BLACK) | ELC-14-BLK |
| 204 | 20 | 1/4" WIRE LOOM @ FT | ELL-25-0 |
| 205 | 4 | MALE TERMINAL | EL-30036 |
| 206 | 4 | FEMALE TERMINAL | EL-30037 |
| 207 | 4 | TWO CONTACT CLIP | EL-38035 |
| 208 | 2 | MALE BODY | EL-38062 |
| 209 | 2 | FEMALE BODY | EL-38063 |
| 210 | 8 | CABLE SEAL | EL-39000 |
| 211 | 2 | TERMINAL RING, 16-14 Ga. #10 BLUE | ELT-31703 |
| 212 | 1 | BRAND FLOW VALVE ELEC. BOX | HV-1201 |
| 213 | 2 | RIVET, FUSE HOLDER | EL-46009 |
| 214 | 1 | SPRING, FUSE HOLDER | EL-46015 |
| 215 | 1 | BODY, FUSE HOLDER | EL-46014 |
| 216 | 1 | 1.5 AMP FUSE, TYPE GMA | EL-70150 |

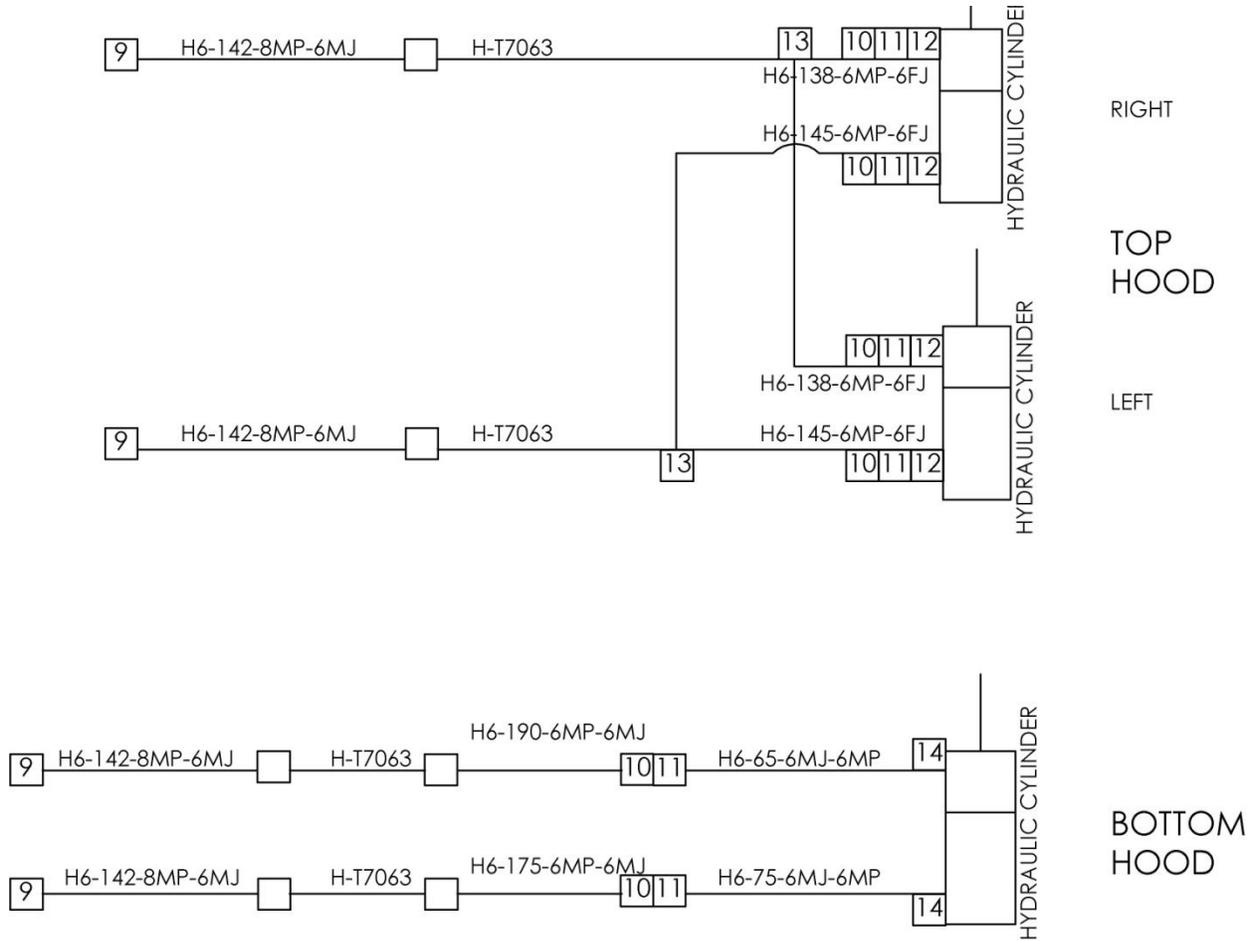

| | | | |
|----------|-----|--|-----------------|
| 15 | 4 | 5/8" HYDRAULIC TUBE, SS | H-T7063 |
| 14 | 2 | 3/8" FJICX x 1/4" MP | A-6501-6-4 |
| 13 | 2 | Tee, 3/8" MJ x 3/8" MJ x 3/8" MJ | A-2603-6 |
| 12 | 6 | 1/4" MP X 3/8" FPX90° | A-1501-4-6 |
| 11 | 6 | HYDRAULIC QUICK DISCONNECT COUPLER, MALE, 3/8" | A-QD-1000-06-06 |
| 10 | 6 | TRACTOR QUICK COUPLER, FEMALE, 3/8" X 3/8" | A-QD2050-6-6 |
| 9 | 4 | QUICK COUPLER, 1/2" X 1/2" | A-QD2010-8-8 |
| 8 | 16 | HYDRA-ZORB TUBE CLAMP 3/8" | HA-1074-H |
| 7 | 1 | 3/8" HOSE, 3/8" MJ X 3/8"MP X 65" | H6-65-6MJ-6MP |
| 6 | 1 | 3/8" HOSE, 3/8" MP X 3/8"MJ X 175" | H6-175-6MP-6MJ |
| 5 | 1 | 3/8" HOSE, 3/8" MP X 3/8"MJ X 190" | H6-190-6MP-6MJ |
| 4 | 4 | 3/8" HOSE, 3/8" MJ X 3/8"MP X 75" | H6-75-6MJ-6MP |
| 3 | 4 | 3/8" HOSE, 1/2" MP X 3/8"MJ X 142" | H6-142-8MP-6MJ |
| 2 | 2 | 3/8" HOSE, 3/8" MP X 3/8" FJ X 145" | H6-145-6MP-6FJ |
| 1 | 2 | 3/8" HOSE, 3/8" MP X 3/8" FJ X 138" | H6-138-6MP-6FJ |
| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |

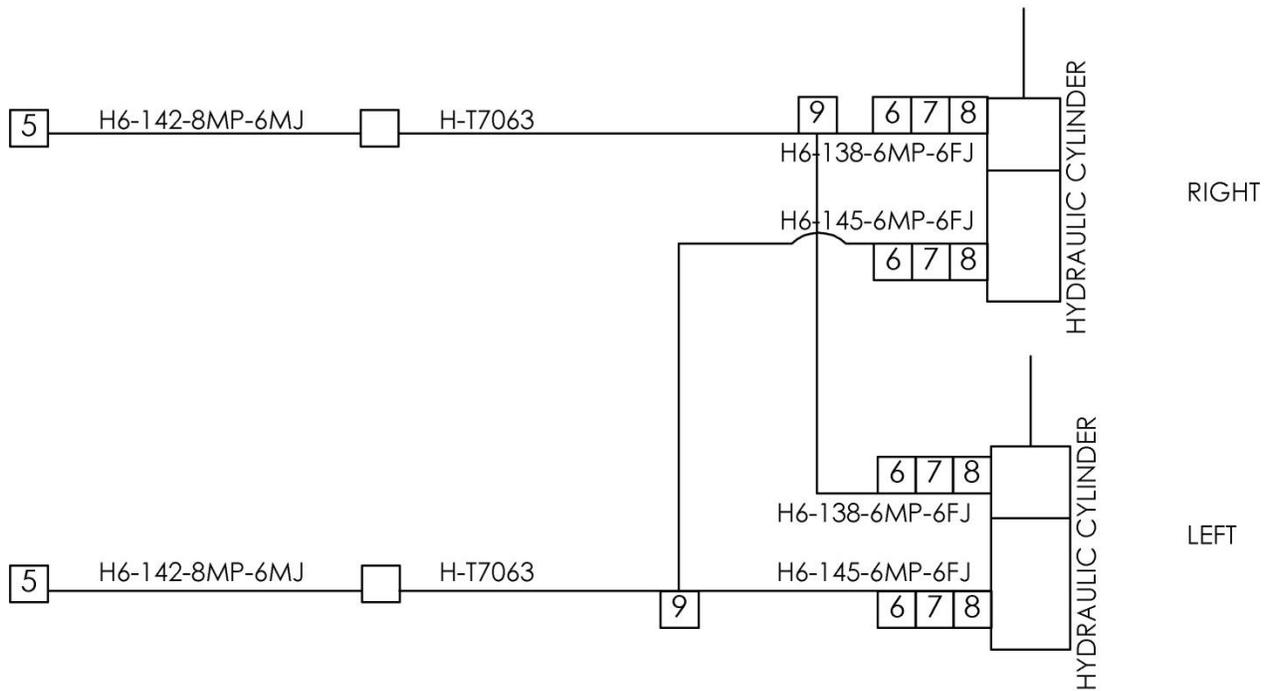


| | | | |
|----------|-----|--|-----------------|
| 10 | 8 | HYDRA-ZORB TUBE CLAMP 3/8" | HA-1074-H |
| 9 | 2 | Tee, 3/8" MJ x 3/8" MJ x 3/8" MJ | A-2603-6 |
| 8 | 4 | 1/4" MP X 3/8" FPX90° | A-1501-4-6 |
| 7 | 4 | HYDRAULIC QUICK DISCONNECT COUPLER, MALE, 3/8" | A-QD-1000-06-06 |
| 6 | 4 | TRACTOR QUICK COUPLER, FEMALE, 3/8" X 3/8" | A-QD2050-6-6 |
| 5 | 4 | QUICK COUPLER, 1/2" X 1/2" | A-QD2010-8-8 |
| 4 | 2 | 5/8" HYDRAULIC TUBE, SS | H-T7063 |
| 3 | 2 | 1/2" HOSE, 1/2" MJ X 3/8" FJ X 142" | H8-142-8MP-6MJ |
| 2 | 2 | 3/8" HOSE, 1/4" MJ X 3/8" FJ X 145" | H6-145-6MP-6FJ |
| 1 | 2 | 3/8" HOSE, 1/4" MP X 3/8" FJ X 138" | H6-138-6MP-6FJ |
| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |

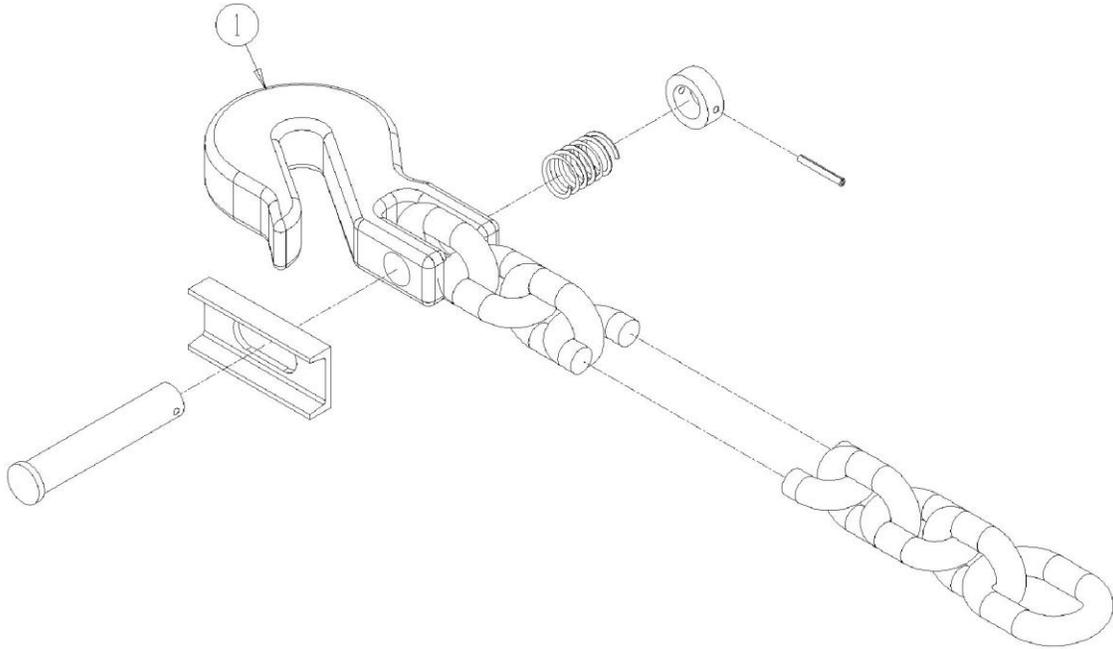


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|----------------------------------|-------------|
| 1 | 1 | SAFETY CHAIN, 30,400 lb CAPACITY | FRM-3167 |
| 101 | 1 | 1" X 3-1/2" G5 HH BOLT ZC | BL-16-350H |
| 102 | 1 | 1" LN w/ NYLON INSERT | BL-16-LN |
| 103 | 1 | WASHER, SAFETY CHAIN | PR37152 |
| 104 | 1 | 1" FW ZC | BL-16-FW |


74418-4-02 Accessories

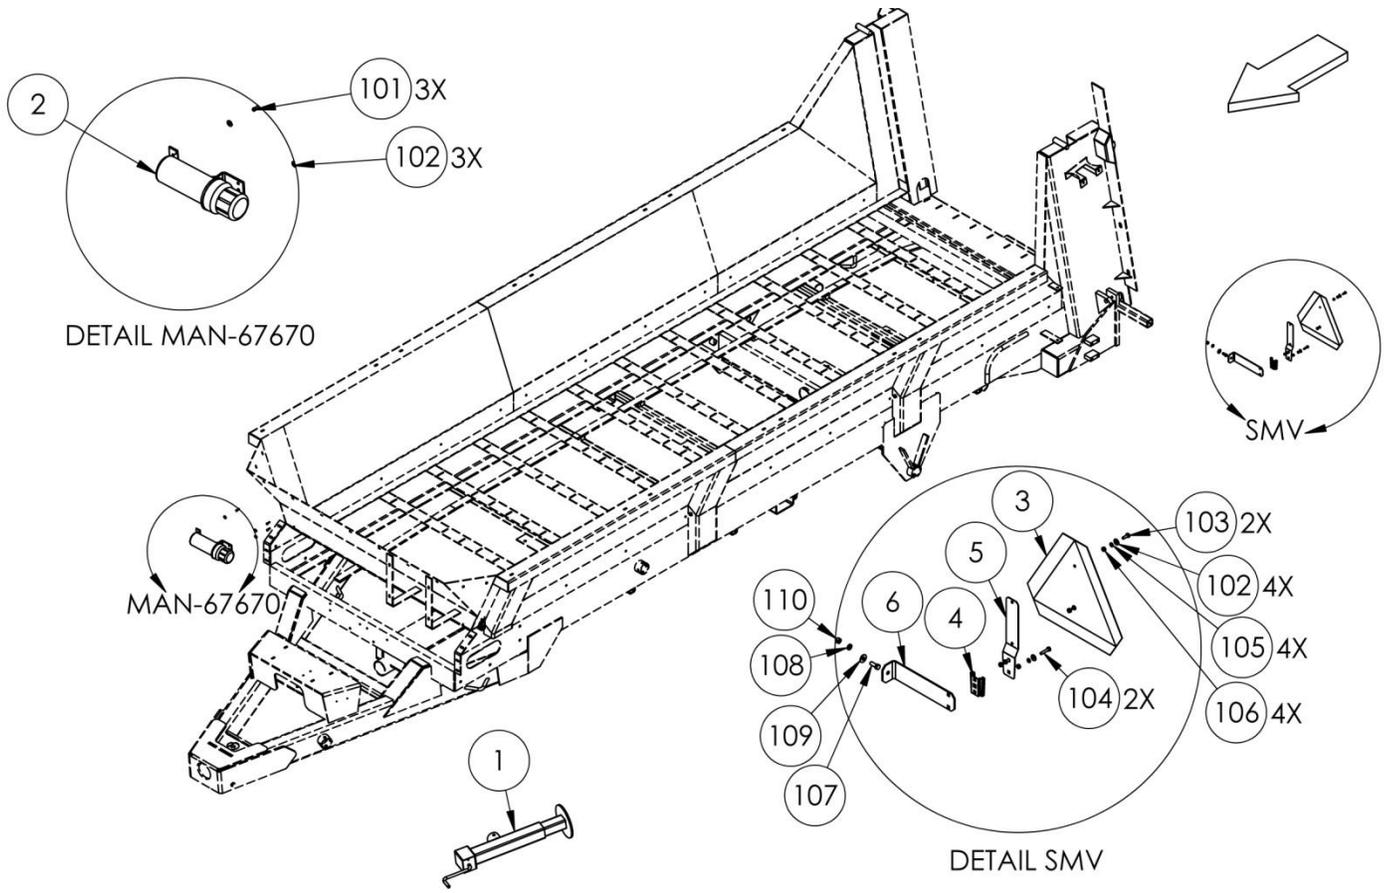


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|---|----------------|
| 1 | 1 | JACK WELDMENT, RAM SIDEWIND JACK, 8000 LB 74418007- | WH-16218 |
| 1 | 0 | JACK WELDMENT, SIDEWIND JACK, 9000 LB -74418006 | WH-16216 |
| 2 | 1 | MANUAL HOLDER | MAN-67670 |
| 3 | 1 | SMV SIGN | SMV-PL |
| 4 | 1 | SOCKET, SPADE MOUNT | SMV-S |
| 5 | 1 | SPADE MOUNT | SMV-SM |
| 6 | 1 | BRACKET, SMV SIGN | PR39117 |
| 101 | 3 | 12-24 X 7/8 DRILL & TAP SCREW | BL-1224-087-DT |
| 102 | 7 | 1/4 USS FW ZC | BL-4-FW |
| 103 | 2 | 1/4-20 X 3/4 HH C/S BOLT G5 ZC | BL-4-075-H |
| 104 | 2 | 1/4-20 X 1-1/4 HEX CAP G5 ZC | BL-4-125-H |
| 105 | 4 | 1/4 SPLIT LW ZC | BL-4-LW |
| 106 | 4 | 1/4-20 HEX FIN NUT ZC | BL-4-N |
| 107 | 1 | 3/8-16 X 1 HHCS BOLT G5 ZC | BL-6-100-H |
| 108 | 1 | 3/8 SPLIT LW ZC | BL-6-LW |
| 109 | 1 | 3/8 USS FW ZC | BL-6-FW |
| 110 | 1 | 3/8-16 HEX NUT ZC | BL-6-N |

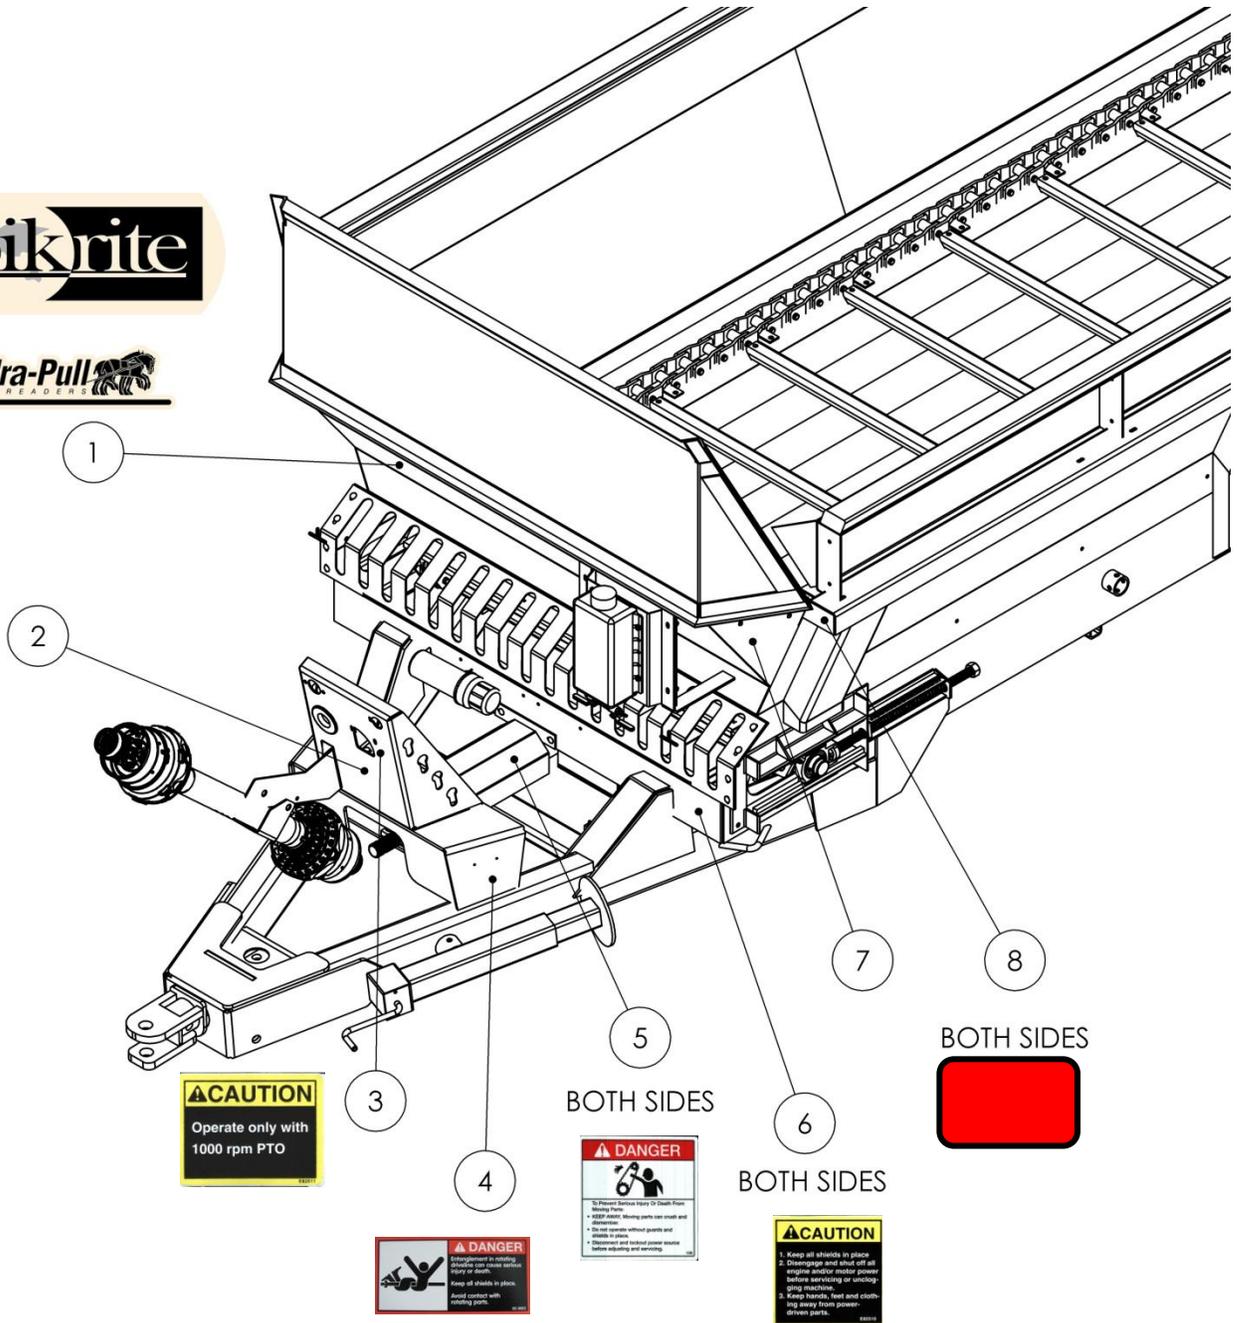

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|---|-------------|
| 2 | 1 | DECAL, TRACTOR DRAWBAR ADJUSTMENTS | DC-0022 |
| 3 | 1 | DECAL, CAUTION, 1000 RPM PTO | DC-0021 |
| 4 | 1 | DECAL, "MADE IN USA" | DC-011 |
| 5 | 2 | DECAL, DANGER, ENTANGLEMENT IN ROTATING DRIVE | DC-0025 |
| 6 | 2 | DECAL, DANGER, HAND CRANK SAFETY | DC-1176 |
| 7 | 1 | DECAL, CAUTION, KEEP ALL SHIELDS IN PLACE | DC-0023 |
| 8 | 2 | DECAL, AMBER, REFLECTOR, SPREADER | DC-0034 |

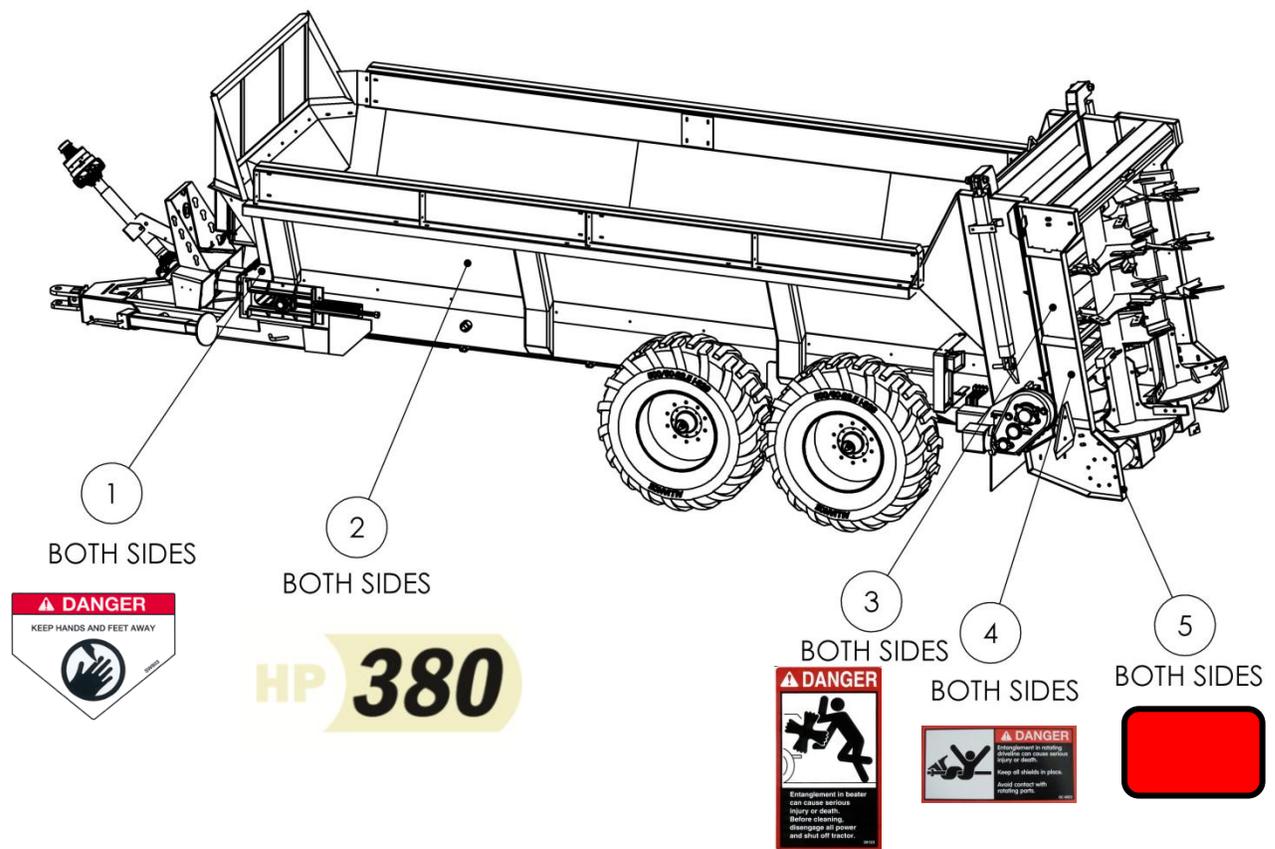


| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|---|-------------|
| 1 | 2 | DECAL, DANGER, KEEP HANDS AND FEET AWAY | DC-1174 |
| 2 | 2 | DECAL, PIKRITE/HYDRAPULL/HP500 | DC-0115 |
| 3 | 2 | DECAL, DANGER, ENTANGLEMENT IN BEATER | DC-0030 |
| 4 | 2 | DECAL, DANGER, ENTANGLEMENT IN ROTATING DRIVE | DC-0025 |
| 5 | 2 | DECAL, RED, REFLECTOR, SPREADER | DC-0033 |

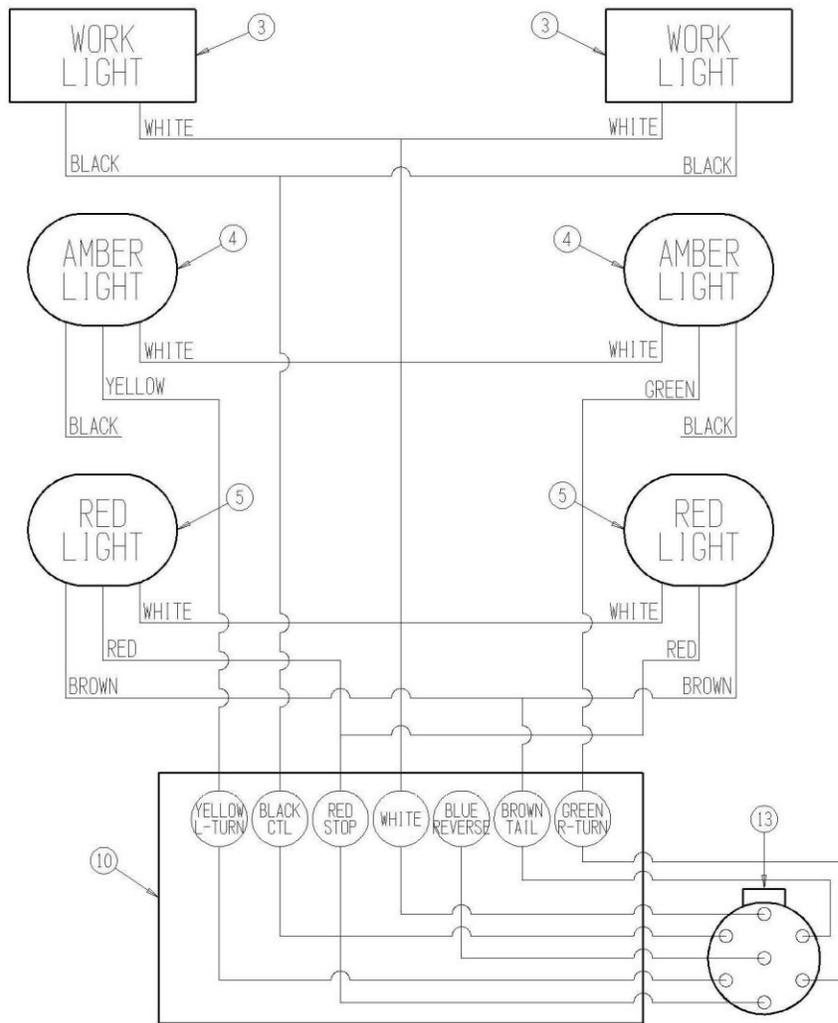

| ITEM NO. | QTY | DESCRIPTION | PART NUMBER |
|----------|-----|------------------------------|--------------|
| 1 | 1 | LIGHT HARNESS, LH | EL-50561-397 |
| 2 | 1 | LIGHT HARNESS, RH | EL-50562-416 |
| 3 | 2 | HARNESS, WORK LIGHTS | EL-40604-13 |
| 4 | 1 | 7 CONDUCTOR HARNESS | EL-50780-362 |
| 5 | 2 | LIGHT BRACKET | PR63007 |
| 601 | 2 | WORK LIGHT | EL-1233 |
| 602 | 1 | LED w/ BRAKE LIGHT, LH | EL-1501 |
| 603 | 1 | LED w/ BRAKE LIGHT, RH | EL-1502 |
| 604 | 1 | JUNCTION BOX | ELE-15-964 |
| 605 | 1 | 7 CONDUCTOR PLUG WITH SPRING | ELT-37675 |
| 606 | 1 | 4-PIN CONN., LH | EL-1503 |
| 607 | 1 | 4-PIN CONN., RH | EL-1504 |

74418-5-02

Optional Side Extension

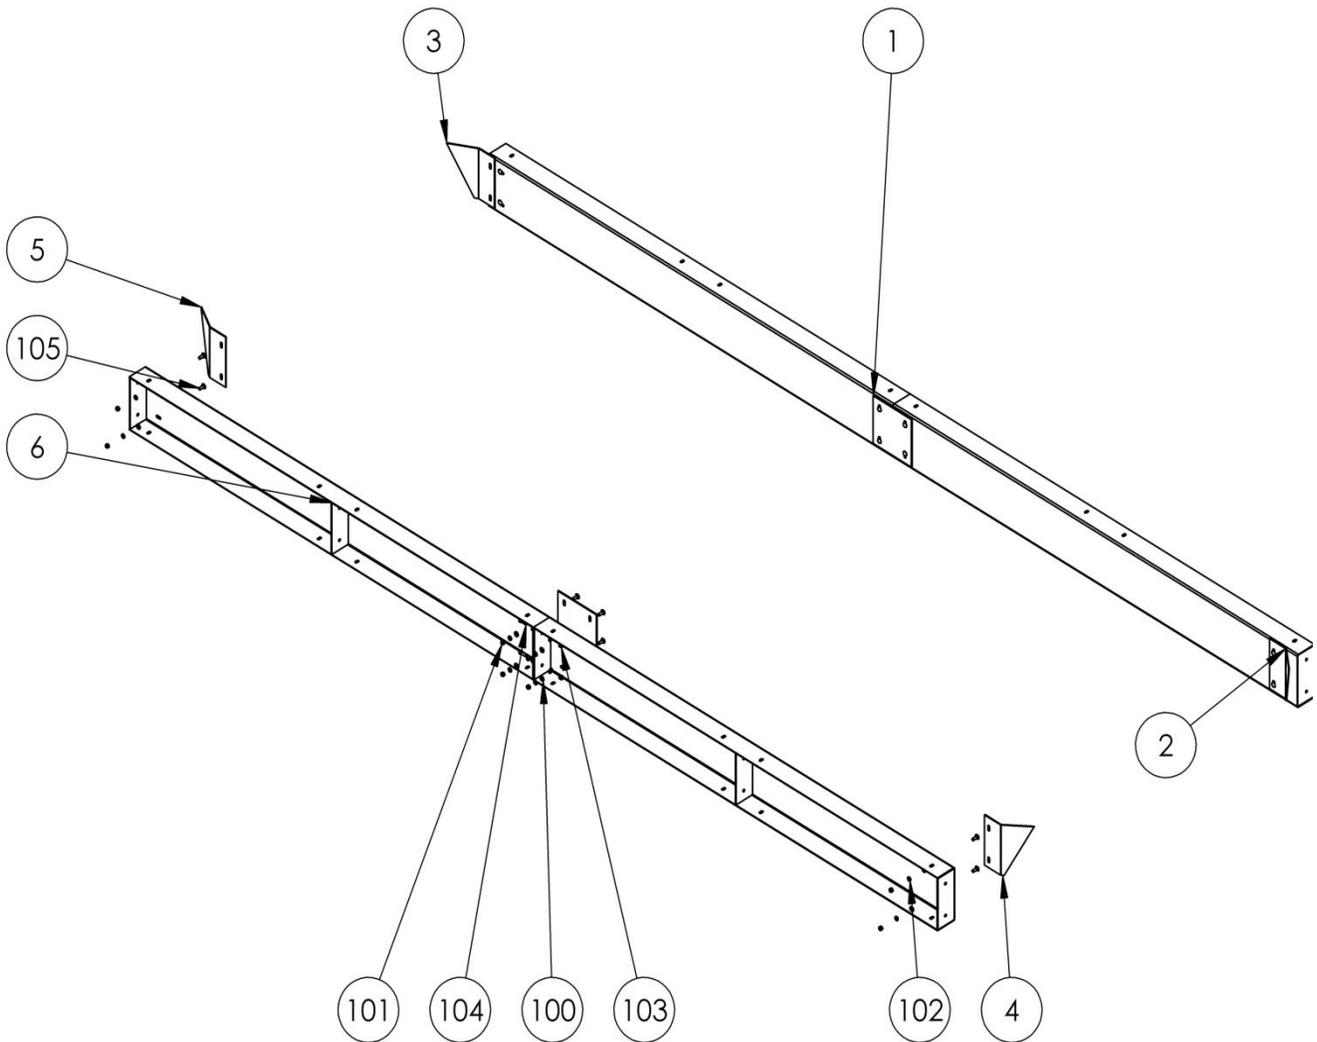

| ITEM NO. | EXPLODED/QTY. | DESCRIPTION | PART NUMBER |
|----------|---------------|--------------------------------|-------------|
| 1 | 2 | PLATE | PR70342 |
| 2 | 1 | TRANSITION, SIDE EXT, REAR RH | PR70341 |
| 3 | 1 | TRANSITION, SIDE EXT, FRONT RH | PR70340 |
| 4 | 1 | TRANSITION, SIDE EXT, REAR LH | PR70339 |
| 5 | 1 | TRANSITION, SIDE EXT, FRONT LH | PR70338 |
| 6 | 4 | SIDE EXTENSION | PR70325 |
| 100 | 24 | 3/8 SAE FW ZC | BL-6-SW |
| 101 | 16 | 3/8-16 HEX NUT ZC | BL-6-N |
| 102 | 16 | 3/8 SPLIT LW ZC | BL-6-LW |
| 103 | 4 | 3/8-16 FIN H LN NE A563 GA ZC | BL-6-LN |
| 104 | 4 | 3/8-16 X 1-1/4 HHCS G5 ZC | BL-6-125-H |
| 105 | 24 | 3/8-16 X 1 CARRIAGE BOLT G5 ZC | BL-6-100-C |

NOTES

NOTES

WARRANTY

Pik Rite, Inc. provides a limited warranty assuring any new Hydra-Pull Spreader to be free from defects in material and workmanship for a period of two (2) years from the original date of purchase.

Pik Rite will repair or replace, at its option and without charge, any defective or malfunctioning part (excluding items of normal wear or misuse) of the spreader for this allotted time.

PIK RITE MAKES NO WARRANTY OF
MERCHANTABILITY OR FITNESS FOR A
PARTICULAR USE.

Customer's Responsibility:

It is the customer and/or operator's responsibility to read the Operator's Manual, to operate, lubricate, maintain and store the equipment in accordance with all instructions and safety procedures. Failure of the operator to read the operators manual is a misuse of this equipment.

It is the customer and/or operators responsibility to inspect the product and to have any part(s) repaired or replaced when continued operation would cause damage or excessive wear to other parts or cause a safety hazard.

It is the customer's responsibility to deliver the product to the authorized dealer, from whom the spreader was purchased, for service or replacement of defective parts, which are covered by warranty.

It is the customer's responsibility for any cost incurred by the dealer for hauling the product for the purpose of performing a warranty obligation or inspection.

WARRANTY INFORMATION

Make certain the warranty registration card has been forwarded to:

Pik Rite, Inc.
60 Pik Rite Lane
Lewisburg, PA 17837

Always give your dealer the serial number of your Pik Rite, Inc. product when ordering parts or requesting service or other information.

In the space provided record the model number, the serial number and the date of purchase to assist in providing you with prompt and efficient service.

MODEL NUMBER: HP380

DEALER: _____

SERIAL NUMBER: _____

ADDRESS: _____

PURCHASE DATE: _____

PHONE: _____

SALESMAN: _____

Keep Page for Your Records

Pik Rite, Inc.
60 Pik Rite Lane
Lewisburg, PA 17837

Phone: 800-326-9763
Fax: 570-523-8175
www.pikrite.com

HP 380
Manure Spreader

Pik Rite, Inc.
60 Pik Rite Lane
Lewisburg, PA 17837

Phone: 800-326-9763
Fax: 570-523-8175
www.pikrite.com

HP 380
Manure Spreader